


Steps to Perform a System Default on the SV9100


Verify that Power to the SV9100 chassis is turned off. Install the GCD-CP10 into Slot 01 of Chassis 1.




Press and hold the LOAD button while you turn on the power button.

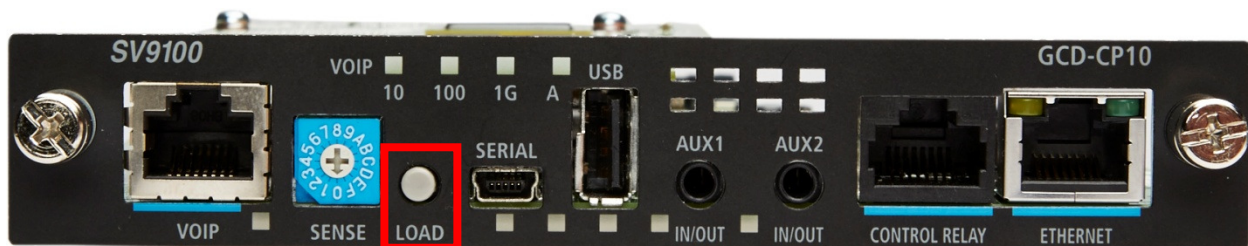


The LED below and to the right of the SERIAL connection will turn solid red.

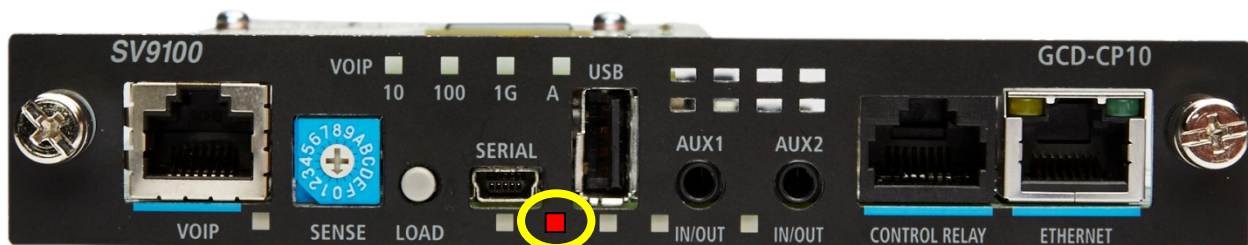

Continue to hold the Load button until the 3rd LED turns solid red.

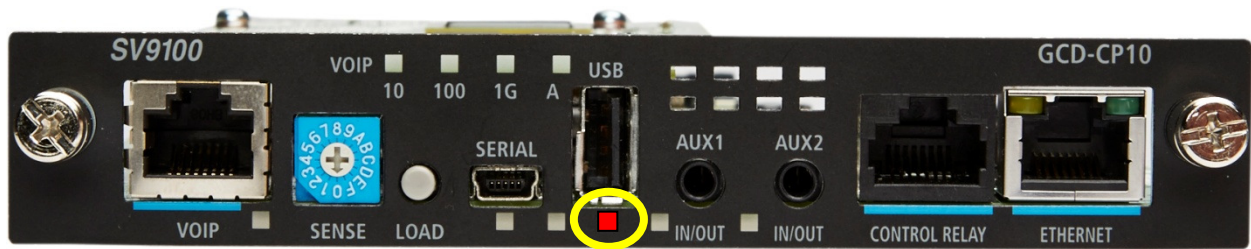


When that happens, release the LOAD button and wait until the CPU RUN LED flashes Green.

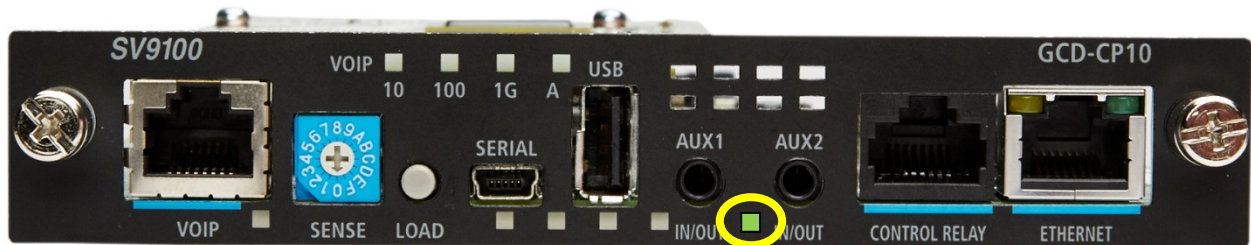

When the Run LED flashes Green, the default process is complete.

The default IP Address of the **ETHERNET** connection is **192.168.0.10**

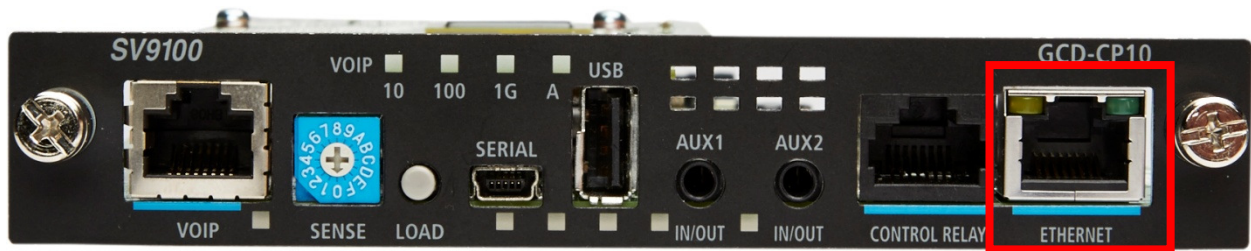

If the CPU has a VoIPDB (GPZ-IPLE) installed, the default IP Address for the **VOIP** connection is **172.16.0.10**

