

OfficeServ SVMi-20E

Programming Reference

Table of Contents

1	<u>System Main Menu</u>	<u>3</u>
	<u>[A] Open Block Table</u>	<u>4</u>
	<u>[B] Save Application</u>	<u>5</u>
	<u>[C] Schedule Table</u>	<u>7</u>
	<u>[D] Subscriber List</u>	<u>9</u>
	<u>[E] System Wide Parameters</u>	<u>12</u>
	<u>[F] Voice Studio</u>	<u>19</u>
	<u>[G] Operating Utilities</u>	<u>24</u>
	<u>[H] Port Activity</u>	<u>30</u>
	<u>[I] Override Mode</u>	<u>34</u>
	<u>[J] View System Reports</u>	<u>35</u>
	<u>[K] Site Information</u>	<u>43</u>
	<u>[L] Status Screen</u>	<u>43</u>
2	<u>Explanation of Default Configuration</u>	<u>45</u>
	<u>Application Design</u>	<u>45</u>
	<u>Important Basic Concepts</u>	<u>46</u>
	■ <u>Blocks</u>	<u>47</u>
	■ <u>Extension and Mailbox Objects</u>	<u>49</u>
	■ <u>Call Directors</u>	<u>49</u>
	■ <u>Event Pointers</u>	<u>49</u>
	■ <u>Modes</u>	<u>50</u>
	■ <u>Mode Specific Event Pointers</u>	<u>50</u>
	■ <u>Template Blocks</u>	<u>50</u>

3	<u>Appendix</u>	<u>51</u>
	<u>Special Characters Used When Writing Dialing Instructions</u>	<u>52</u>


System Main Menu

The following section provides in-depth definitions and descriptions of all the programmable fields within the SVMi-20E software. Some fields are not accessible in the SVMi-20E. If you cannot put the cursor on them you can not change them.

To access the System Main Menu, from the Status screen press [ESC] key on your computer's keyboard and enter the password, then press [ENTER].

The System Main Menu provides easy access to the different areas of SVMi-20E programming. The specific areas can be accessed using the cursor controls or by selecting the designation letter. The areas that can be accessed are:

- [A] OPEN BLOCK TABLE
- [B] SAVE APPLICATION
- [C] SCHEDULE TABLE
- [D] SUBSCRIBER LIST
- [E] SYSTEM WIDE PARAMETERS
- [F] VOICE STUDIO
- [G] OPERATING UTILITIES
- [H] PORT ACTIVITY
- [I] OVERRIDE MODE
- [J] VIEW SYSTEM REPORTS
- [K] SITE INFORMATION
- [L] STATUS SCREEN

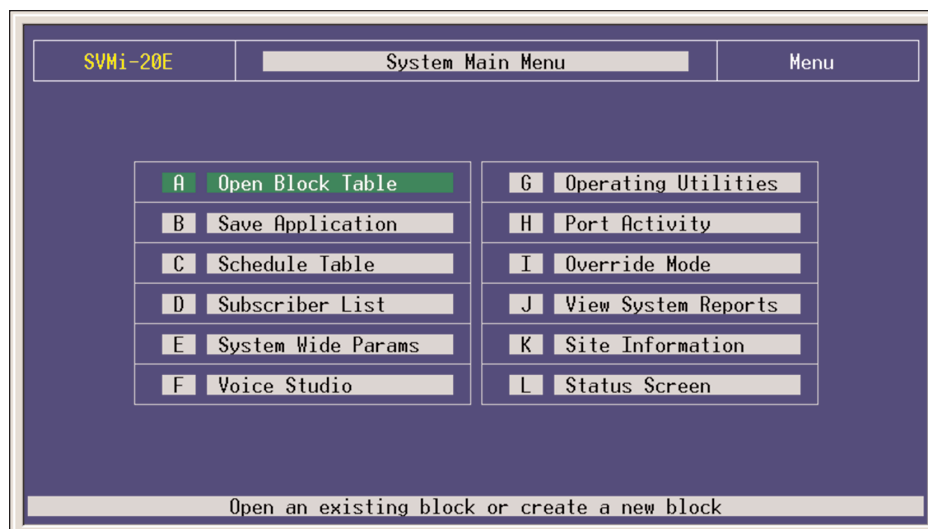

[A] OPEN BLOCK TABLE

To Open a Block Table, from the System Main Menu select OPEN BLOCK TABLE and press ENTER.

SVMi-20E OPEN Block Target Gen

BLOCK Label...

- Announcemnt
- AudiotexLib
- Bye
- Dial
- Directory
- DocumentLib
- Eclass
- Extension
- Fax
- List
- Mailbox
- Mclass
- Menu
- Mode
- Net Mailbox
- Port

Highlight desired object type and press ENTER to select

You may need to move your cursor through the list to scroll and access all the blocks available.

SVMi-20E OPEN Block Target Gen

BLOCK Label...

- Dial
- Directory
- DocumentLib
- Eclass
- Extension
- Fax
- List
- Mailbox
- Mclass
- Menu
- Mode
- Net Mailbox
- Port
- Query
- Speak
- Station

Highlight desired object type and press ENTER to select

The Block Table is used for building SVMi-20E call routing applications, as well as Audiotex, Fax-On-Demand, and Query applications. This is the most frequently accessed area in the SVMi-20E and determines its behavior when it is routing calls. All the prompts and options offered to callers are programmed here.

Because most of the programming, for any customer, will usually be in the Block Tables, these are dealt in detail with separately in the next section. For more information on building call routing applications [see BLOCK TABLES](#).


[B] SAVE APPLICATION

If changes are made to the customer database they are live and immediate, however they are not immediately saved to disk. The save to disk will only take place if:


- a) The administrator reboots the system after gracefully exiting using 'Operating Utilities' and 'Shutdown System'.
OR
- b) The nightly maintenance runs. This happens each night at 3 a.m.
OR
- c) The administrator selects 'Save Application' from the System Main Menu.

The save application option forces the changes to be written to the database immediately. This will ensure that if the system loses power between the time that the changes are made and the nightly maintenance, the changes will be preserved.

Warning: For this data to be saved the SVMi-20E must lock its ports temporarily. Any idle ports are immediately locked. As ports become free they are also locked. When all ports are locked the data will be saved and the ports placed back online.

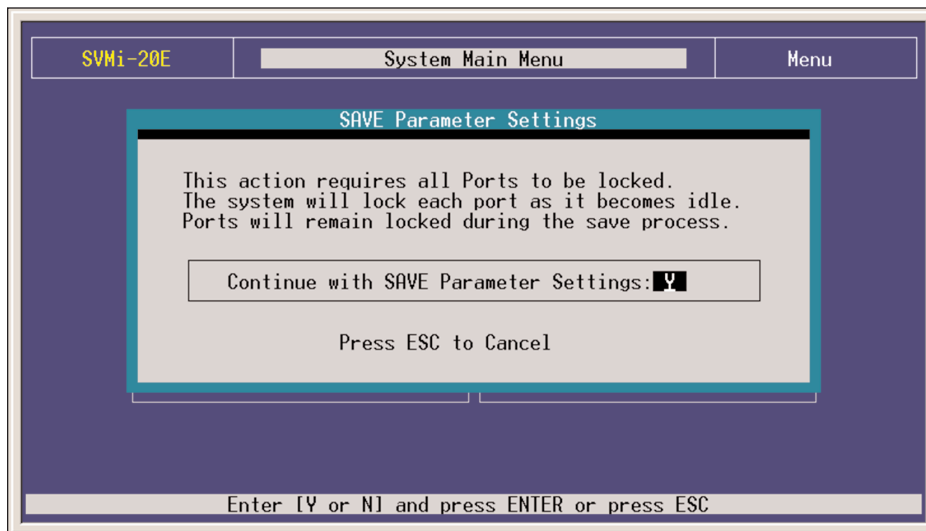

The system will politely Lock all ports before performing the save. If any port is off hook engaged in a call, the system will wait until the caller hangs up before locking that port.

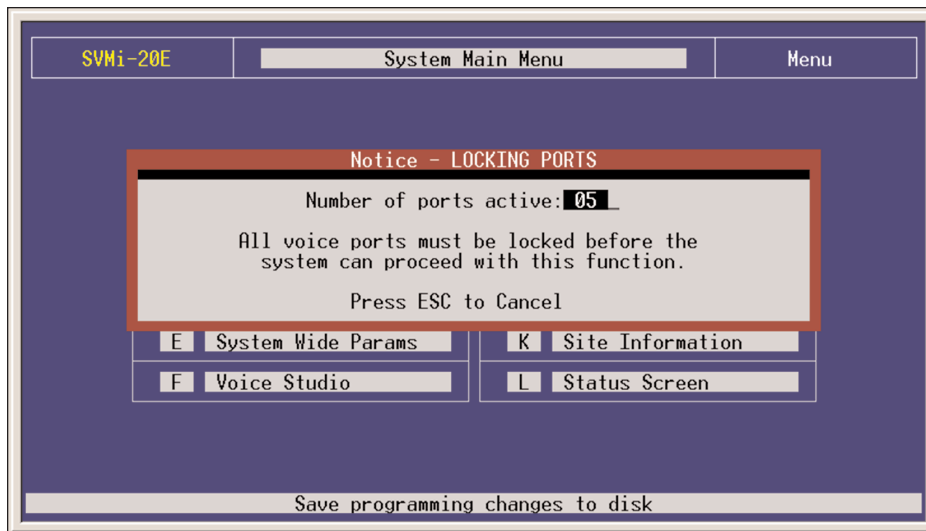

[C] SCHEDULE TABLE

The Schedule Table determines when the SVMi-20E will automatically change Modes. A mode is a set of operating rules for a specific situation, like DAY Mode or NIGHT Mode. These changes may be based on Port Number, Date or Day of Week, and Time of Day. The Schedule Table contains one record for each scheduled change.

This selection of modes may be automatically set by this schedule table or manually overridden via a touch tone phone, using the MANUAL MODE SELECTION function. When a call comes in, the schedule table is checked to find out which mode rules to apply to the call session.

If the entry says 'DCS AUTO' then the SVMi-20E will change between mode 1 (Day Mode) and Mode 2 (Night Mode) whenever the phone system changes between Day and Night operation.

The SVMi-20E selects a mode from this schedule based on an Order of Precedence. Schedule table entries which select the mode based on Date takes precedence over Day of Week (DOW).

Each entry defines a start time for that specific mode. The mode will continue until the next scheduled start time for a particular port.

In the example screen shown, if an additional entry is made which selects Holiday Mode, when Date = 12/25, it will take precedence over the other records. In other words, the SVMi-20E will switch to Holiday Mode on December 25 at Midnight, regardless of what Day of Week, it happens to be.

The information contained within the Schedule Table screen shown in this section is for discussion and display purposes only.

One page contains the Schedule Table parameters. The parameters are grouped by category as follows:

SVMi-20E		Schedule Table			Page 1
Mode Name	Ports	Date	Weekday	Start	
03:Holiday	ALL	12/25		12:00A	
03:Holiday	ALL	7/4		12:00A	
03:Holiday	ALL	1/1		12:00A	
--:DCS AUTO	ALL		Sun-Sat	12:00A	
Press ENTER to edit a field within the line					

MODE NAME COLUMN This is the mode block which will start the application. To create a new mode, highlight a blank line and press ENTER to bring up the Target Generator. Select a new or existing mode block and press ENTER. The Mode Name column is automatically filled in. To review or edit an existing mode block simply press 'Ctrl + O' on the highlighted mode Block you selected. To finish scheduling this mode, fill in the rest of the line with the following information.

PORTS COLUMN The port number (1 through 16) sets a mode change for a particular port. If there are no other entries in the Schedule Table for this port, it will run the specified mode continuously. If this field is set to 'All', this entry will be used by all ports which do not have specific port entries. Ultimately the schedule is assigned to a port or group of ports. If you have an entry for All ports to go into the Holiday Mode and an entry for ports 15-16 to go into the Emergency Service Mode at the same Date, DOW, and/or Time then ports 15 & 16 will NOT follow the mode setting set for ALL ports. They will go into Emergency Service Mode and stay there until the net scheduled mode change that included or addressed ports 15-16 specifically.

DATE COLUMN Month and day of month (mm/dd) when the change of mode will occur. If a date is entered in this field, no option will be given to make an entry in the DOW (Day of Week) field. This entry will take a higher order of precedence over records based on DOW only on the date specified. Therefore, to guarantee a particular mode setting over a three day period, a date entry should be created for each day of that period.

WEEKDAY COLUMN Day of Week when a mode change is to occur regularly on specific day of the week. Either the Date or Weekday column may be filled in. If you should manage to make entries in both columns, the SVMi-20E will realize a conflict and automatically delete one of them. You can select ranges such as 'MON-FRI' to cover week days only, or 'SUN- SAT' to cover all seven days (as used by DCS AUTO).

START COLUMN The Hour and Minute when a change in mode should occur. The hour must be specified in 24 Hr. format (i.e., 1:30 P.M. is entered as 13:30).

[D] SUBSCRIBER LIST

Subscriber List

To access the subscriber list, from the System Main Menu select SUBSCRIBER LIST and press ENTER. You will be asked to select a group number the default subscriber group is 01. (NOTE: You can have up to 99 different subscriber groups on the SVMi-20E system. These are typically useful in multi-tenant environments, but also have other useful applications where you need to isolate some members of an application from others.) After entering a group number and pressing ENTER, the subscriber list for that group will open.

The screenshot shows the SVMi-20E System Main Menu. A dialog box titled "Group Number" is centered on the screen, prompting the user to "Please Enter the Group Number:". The number "01" is entered in the input field. The background menu is partially visible, showing options A through L. At the bottom of the screen, a status bar reads "Enter the subscriber group number (01-99)".

This area of programming is used to quickly view, or edit the subscriber list. You will see a list of subscribers along with their extension and their mailbox number.

The number of mailboxes activated on your system will depend on the existence of a valid upgrade key.

The screenshot shows the SVMi-20E Subscriber List screen. The title bar indicates "Subscriber List" and "Group: 1". Below the title bar is a table with the following columns: Subscriber, Ext Number, Mbx Number, EClass, and MClass. The first row of data shows "Operator" as the subscriber, "500" as the extension number, and "No Messaging" in the Mbx Number column. The rest of the table is empty. At the bottom of the screen, a status bar reads "Press ENTER to edit a field within the line".

Subscriber	Ext Number	Mbx Number	EClass	MClass
Operator	500	No Messaging		

To view a subscriber's data, scroll to the correct subscriber using the arrow keys and press ENTER. Use the right arrow key to select extension block or mailbox block. When you have made your selection press 'Ctrl + O' (to open) and the highlighted block will open. You can then edit specific fields. See Extension Block and Mailbox Block for additional information.

You will also see an EClass and MClass. These are class of service options for the extension and mailbox, and can be accessible by placing the cursor on them and pressing 'Ctrl + O' (Open). You can also change the Eclass or Mclass assigned to a subscriber by pressing ENTER on the subscriber's Eclass or Mclass you wish to change and select another one from the target generator or you can create and assign a new one instantly.

Entering a New Subscriber


To enter a new subscriber, highlight a blank line and press ENTER. Type in the subscriber's last name, enter a comma (,) and type the subscriber's first name. Press ENTER and then type the extension and mailbox numbers for this subscriber. The SVMi-20E automatically creates the extension and mailbox for the subscriber to use and fills in the EClass and MClass data.

The SVMi-20E stores the subscriber's name in 'last name,firstname' format. When entering the subscriber's name this format should be followed.

This format is only important because the directory feature will search on a specific field (first name or lastname) and the search should be consistent for all entries.

Subscriber Export

To get a list of export commands go to Page 2 of the F1 Navigational help screens.

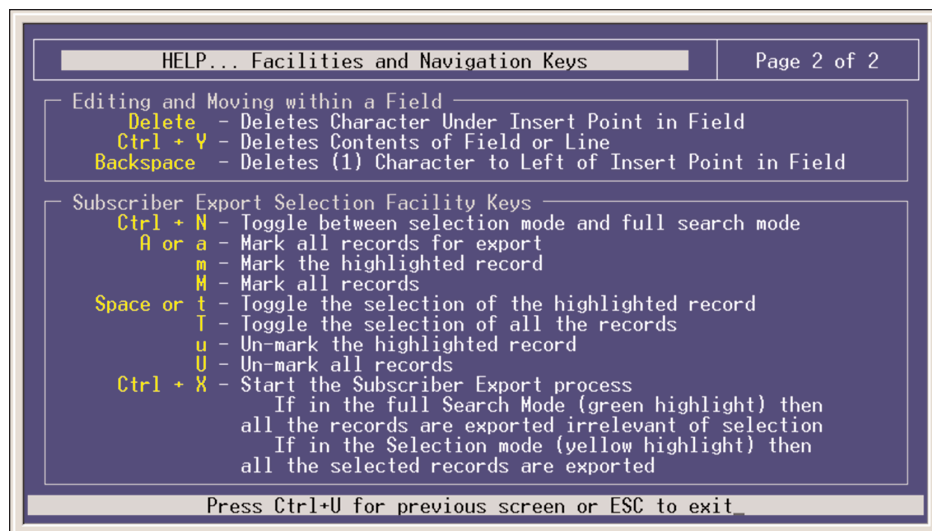

The Export utility allows you to either choose all subscribers or select the subscribers of your choice to be exported to a .txt file.

This will be useful in Multi-Node environments where you are using multiple SVMi-20E and utilizing Network Mailboxes (AMIS). You can Export the Subscribers from one node to a Export.txt file and then import those subscribers into another SVMi-20E in another node as Network MBXs. This will allow subscribers in one node to transfer messages they receive in their mailbox to a mailbox of a subscriber in another node on a different SVMi-20E system.

[E] SYSTEM WIDE PARAMETERS

To access the System Wide Parameters, from the System Main Menu select SYSTEM WIDE PARAMETERS and press ENTER. (NOTE: Only Administrator's logged in with the System Administration Password can gain access to System Wide Parameters.

System Wide Parameters include fields displaying the software release, version number, the authorized number of ports, and options. Other parameters control functionality for the whole system.

IMPORTANT NOTE: Starred (*) items, on page two, require the system to be restarted before changes to those selected parameters can take effect.

The first screen mostly provides information only. This information may be useful to you or may be needed during a technical support call.

General Information

This is mostly an information page. At the bottom there is a parameter where you can adjust or set the overall volume of the system.

DEFAULT VOLUME LEVEL The choices are Quietest, 2, 3, Normal, 4, 5, Loudest) Normal is the default for this parameter. To change press ENTER and select the setting that best benefits your installation.

SVMi-20E	System Wide Parameters	Page 1 of 4
The SVMi-20E Release 4.1 V1: May 17, 2005 12:57.22		
Serial No.....	000002-N0001	
Startup.....	2/22/07 15:22.15	
MAC Address.....	00 00 F0 E8 05 42	
Voice ports installed.....	12	
Maximum subscribers.....	No Limit	
Maximum E-Mail subscribers....	5	
Total run time.....	159.3	
Run time remaining.....	No Limit	
Default Volume Level.....	Normal	
Default Volume used for all ports.		

System Wide Parameters
Page 1 of 4

System Timers

SVMi-20E		System Wide Parameters		Page 2 of 4	
System Timers			Timing Protocols		
Screen timeout.....		1800		*Hook flash duration..... 70	
Daily maintenance.....		3:00A		*Prompt off hook delay... 50	
Reboot at Maintenance			*Min loop current off.... 30		
Daily... N			Voice Files		
Weekly... N On every.... Mon			Min recorded length..... 100		
Monthly: Y On day number: 1			Dial tone trim size..... 150		
System Passwords			Use 32 Kbit/s rate..... Y		
Subscriber default... 0000			Touch-Tone Management		
Subscriber PSWD Min Length: 0			Minimum DTMF duration 5		
System admin..... 0000			DTMF cutout period..... 5		
Application admin... 0000			*Outbound DTMF duration... 8		
Subscriber admin... 0000			*Outbound DTMF gap length: 8		
Time to wait for keyboard entry before time out in seconds					

System Wide Parameters

Page 2 of 4

SCREEN TIMEOUT This is the time interval before the administration screen will backup to a previous level screen and ultimately revert to the port status screen. This is useful while in the middle of programming and you walk away leaving the system vulnerable to another less experienced person playing with the program. The system will keep escaping back one screen level based on this setting. Ultimately stopping on the Port Status Screen that is password protected.

DAILY MAINTENANCE TIME This is the time when the SVMi-20E performs routine daily maintenance. Daily maintenance will save the system tables and perform message purging (Voice Mail, Announcement, and/or Fax features). Inputs must be specified in 24-hour time. The default setting is 3:00 AM.

Maintenance will not occur until:

- It is after the daily maintenance time (typically it does not run until 2 to 10 minutes past the actual set time).
- 23 hours have elapsed since startup or the last daily maintenance interval.

Daily Maintenance itself does not require a Reboot. The reboot at maintenance time is handled by a separate parameter (listed below).

REBOOT AT MAINTENANCE The system can be set to reboot on a scheduled interval of either Daily, Weekly, or Monthly. This is useful to help clear memory buffers that fill up of data that is no longer being used. When activated the reboot will occur after the system performs it's daily maintenance for that specified day.

Setting **Daily** to yes will reboot the system every night at maintenance time. Default is 'N'

If you set **Weekly** to 'Y', you will also need to pick a day of the week (SUN, MON, TUE, WED, THU, FRI, or SAT). The "on every" parameter has no effect if the Weekly setting is 'N'. Default is 'N', 'SUN'

Monthly is the recommended and default setting. When you select Monthly you must pick a day in the month for the reboot to take place. Valid values are between 1 and 31. Default is 'Y', '1'

System Passwords

SUBSCRIBER DEFAULT PASSWORD The digits used as the default settings for extension and mailbox passwords. The digit input may be from 1 to 8 digits in length. When a mailbox or extension password is reset, this is the value that the password will be reset to. The default setting is 0000.

SUBSCRIBER PSWD MINIMUM LENGTH This parameter defines the minimum number of digits used in a subscriber's password. A password can be equal to or larger than this value. If this value is changed to a larger value on a running system, subscribers will be forced to change their password to one that meets these requirements the next time they log in. The system will prevent them from doing anything including listening to new messages until they first change their password to meet the minimum requirements. A setting of '0' equals NO minimum password length. Valid values can be set from 0 to 8, the default is:0

SYSTEM ADMIN This affects both the GUI and the TUI. With the GUI (Graphical User Interface); this password gives the administrator access to all parameters. It is the highest level password and enables the administrator access to shutting the system down. With the TUI (Telephony User Interface), this password along with the remote login procedure gives the administrator access to recording system prompts and overriding the scheduling by engaging a specific mode. This password is also required to access System Wide Parameters. Without this password you would not be able to set the other system level passwords.

APPLICATION ADMIN This works with the GUI only and denies access to only three areas: System Wide Parameters, Exit SVMi-20E, and Port Activity. This is typically given out to an administrator's assistant. Though accessing the system with this password could still allow the user to damage the application, they would not be able to shut down the system or change the passwords.

SUBSCRIBER ADMIN This affects only the GUI and allows access only to the following: Subscriber List, Display User Log, and Status Screen.

Timing Protocol

These three parameters are displayed to let you know how the system is set up. These settings can not be changed.

Voice Files

MIN RECORDED LENGTH This parameter sets the minimum record time that is to be considered valid. It is specified in hundreds of seconds. A setting of 50 means 0.5 seconds or 500 milliseconds. The default value is 100. If this value is too high, short recordings will be discarded. If it is too low, the system will consider disconnects as a valid recording.

DIAL TONE TRIM SIZE This amount is trimmed off the end of any recorded message that is terminated by dial tone. This parameter is measured in hundreds of seconds. The default value is 150.

USE 32 KBIT/S RATE This adjusts the sampling rate of all recordings. A 'Y' in this parameter sets the sampling rate at 8KHz resulting in the message storage time to be at a rate of approximately 14.4MB per hour. When set to 'N' the sampling rate is 6KHz resulting in the message storage time to be at a rate of approximately 10MB per hour. The default value is 'Y'. It is recommended (not required) when using E-Mail Gateway that "USE 32 KBITS/RATE" be set to "Y".

32 Kbit	4GB CF	2GB HD ¹	1GB CF ¹	256MB CF ¹	128MB CF ¹
Y (Default)	270 Hours	144 Hours	65 Hours	15 Hours	7 Hours
N	330 Hours	192 Hours	95 Hours	24 Hours	12 Hours

Hours above are approximates and are to be use as a general guideline. Actual message storage will be less and may vary based on size of application, number of languages installed, number of subscribers, audiotex and fax document usage, as well as number of faxmail messages.

IMPORTANT NOTE: If you are using Query Blocks that are taking input from anything other then voice, you **MUST** set Use 32 Kbit/s rate to 'Y'. Also if using Speak Blocks that speak an Index or register containing numeric values you **MUST** set Use 32 Kbit/s rate to 'Y'.

Touch-Tone Management

MINIMUM DTMF DURATION This parameter controls the sensitivity of the DTMF (touch-tone) detectors only during recording of voice prompts and announcements. The value represents the minimum time period (in hundreds of seconds) during which a tone must be valid in order to be accepted as a caller entry. A lower value makes the SVMi8 more sensitive to DTMF tones. If excessive "Talk Off" problems are experienced during recording operations, the value should be increased. Talk Off occurs when a human voice emulates a DTMF tone. If users frequently experience difficulty in stopping recording (as evidenced by touch tones being included in the recordings), this value should be reduced. This parameter is expressed in hundreds of a second. The default is 5 (50 ms).

Note: Drastic changes of this value are not recommended. A small change can make a significant difference. This parameter has no effect during playback.

DTMF CUTOFF PERIOD If, during prompt playback, the DTMF detector senses a tone, the SVMi-20E will temporarily suspend playback for the time period specified by this parameter. If the tone remains valid during this time, it is considered to be a valid caller entry and playback is stopped. If the tone becomes invalid while playback is temporarily suspended, it is considered to be "Talk Off" and playback is resumed. This value is expressed in hundreds of a second. The default is 5 (50 ms).

Note: This parameter has no effect during recording.

***OUTBOUND DTMF DURATION** This parameter controls the duration of tones dialed by the SVMi-20E. Tone Duration sets the duration of each tone dialed. This value is expressed in hundreds of a second. The default is 8 (80 ms). Note: If you change this parameter you must save the application and do a proper shut down before resetting the SVMi-20E.

***OUTBOUND INTER-DIGIT TIME** These parameters control the duration of tones dialed by the SVMi-20E. Inter-Digit Time sets the time between dialed tones. This value is expressed in hundreds of a second. The default is 8 (80 ms). Note: If you change this parameter you must save the application and do a proper shut down before resetting the SVMi-20E.

¹ Discontinued as of June, 2011.

Multilingual Voice Prompts Support

The Multilingual Voice Prompt Support page shows a list of all installed languages. Languages are defined by Language and Locale (or dialect). The two fields on this page that you can edit are:

Language	Locale	Language Code	Key Code
English	American	EN_US	1
French	Canadian	FR_CA	3
Spanish	Castillian	SP_CA	2

Default System Language: English, American

Select a DTMF digit to map to the first language

System Wide Parameters

Page 3 of 4

KEY CODE The key code is the digit entered by the caller and used by the SVMi-20E to identify a language selection.

This key code is used in a language selection menu that must be built specifically for your application.

DEFAULT SYSTEM LANGUAGE This sets the default operating language of the system. By default this is English, American but can be changed to any installed language.

The standard languages installed are; English (United States), Spanish (Castilian), and French (Canadian).

NOTE: All language selection is based on the order of the defined languages in this screen. If the languages are to be re-ordered, added to or changed, then it should be done first, before any mailbox language options are set.

SVMi-20E		System Wide Parameters		Page 4 of 4	
SMTP Server					
Host ID:					
Port...	25				
SMTP User ID:					
Password....					
Domain..					
Addressing					
Report...					
Reply To:					
Time Zone:	Eastern Standard Time		Daylight Savings:	Y	
License Key...					
SMTP server host address					

System Wide Parameters

Page 4 of 4

The Parameters set in the SMTP Server section on this page, are used for sending mail to the address set in the "Report:" field. The REPORT is used for sending error reporting to the ON or OFF site system administrator. These SMTP Server parameters are NOT used for Subscriber E-Message Delivery and/or Notification. See MCLASS SMTP Server settings for use with individual or groups of subscribers.

SMTP Server

HOST ID Enter the IP address of the Host Mail Server that the SVMi will use to send the E-mail error report to the ON/OFF site System Administrator.

PORT The default (recommended) port to use is: 25. Most Mail Servers look at port 25 for receiving and sending Mail.

SMTP USER ID (OPTIONAL†) This is the User ID the SVMi will use to log on to the Mail Server and Identify itself as a Client associated with sending Mail.

PASSWORD (OPTIONAL†) This is the password associated with the SVMi's User ID for logging into the Mail Server verifying it is the Client it said it was.

DOMAIN (OPTIONAL†) The Domain is used as part of the authentication process between the SVMi and the Mail server. Based on the Local Domain Name and Domain ID the mail server can validate that it is accepting mail from this Client.

† Optional parameters are associated with Authentication to the Mail Server. Mail Servers that are on a Local (non-Public) IP, often do not require authentication.

Addressing

REPORT If an E-Mail fails or is rejected by the Mail server (a Failure is generated after the total number of Attempts parameter in the MCLASS has been exceeded) a Failure Message is generated and sent to the recipient entered in this field. This is usually the ON Site Systems or IT Administrator. The Recipient could be an OFF Site Administrator as well.

Important Note: If the LAN is down, if the SMTP Server is Down, or for numerous other Network failures, it may not be possible for the SVMi to notify the Administrator of a failure.

REPLY TO Many Mail Servers will require a Valid 'Reply To:' address. E-Mails with a Blank or Non-Formatted 'Reply To:' could be considered SPAM and blocked by the Server. This parameter only applies to E-Mails sent that do not have a valid or known 'From:' address, as in a Public Caller. See the Mailbox Block 'From:' parameter of an individual subscriber for creating Valid 'From:' addresses for subscribers sending voice messages to other subscribers.

Important Note: Mail sent with this 'Reply To:' address should be blocked by the IT administrator or sent to a inbox that dumps it's data at during preventative maintenance. Keep in mind that Voice Messages sent by public callers can not be replied to via e-mail. The only purpose for this parameter is because of the requirements dictated by some Mail Servers or IT department policies.

E-MAIL ADDRESS SYNTAX An e-mail address can be entered a couple of ways.

The traditional e-mail syntax is: username@mailserverdomain.domainsuffix (domain suffix = .com, .net, .org, etc...) in this case the name entered as the Mailbox label name will be displayed in the Inbox "From" field if the voice message was sent subscriber to subscriber.

In some cases the number of characters in a persons name is longer than the label name length in a Mailbox Block. Until now no-one saw that name so it didn't matter. If you do not want the Recipient to see the label name as it is typed you can use the following syntax:

Firstname Lastname <username@mailserverdomain.domainsuffix>
OR
Departmentname <username@mailserverdomain.domainsuffix>

This applies to all fields that accept an e-mail address:

- System Wide Parameters: "Report" & "Reply To"
- Mailbox Block: "From", "Deliver MSG", & "Notify Only"

TIME ZONE Select the Time Zone, from the list, associated with where the SVMi will be installed. The default Time Zone is: "Eastern Standard Time".

DAYLIGHT SAVINGS Honor Daylight Savings in E-Mail Date stamp. The Default is: "Y".

LICENSE KEY Enter the 53 character License Key. The License Key is made up of 5 eight character segments separated by a hyphen. This field is case sensitive and you must enter the hyphens between segments. With no License Key entered the system is authorized for a maximum of 5 E-Mail Gateway enabled mailboxes.

Note: If you receive the license key electronically (via e-mail) and you use the same computer to login to SVMi's remotely with hyperterminal, you can use Microsoft Copy ([CTRL] [C]) to copy the license key to the clipboard and then use hyperterminal's "PASTE-TO-HOST" to paste it to the SVMi License Key field. To do this you must be logged into the SVMi and have the cursor on the license key field.

[F] VOICE STUDIO


To access the Voice Studio, from the System Main Menu select VOICE STUDIO and press ENTER.

The Voice Studio is an utility for recording custom prompts and announcements. A series of dialog screens will lead you through setting up your system for recording. You will be asked the following questions.


THE TELEPHONE EXTENSION The telephone extension number to use. Enter your extension or telephone number that the SVMi-20E will call to set up a recording session. Typically this will be a conveniently located station on the system.

Leave the telephone number blank to review the prompt or announcement text only.

PROMPT OR ANNOUNCEMENT Three studios are available to choose from. Select either Prompt (P), Announcement (A), or Fax (F).

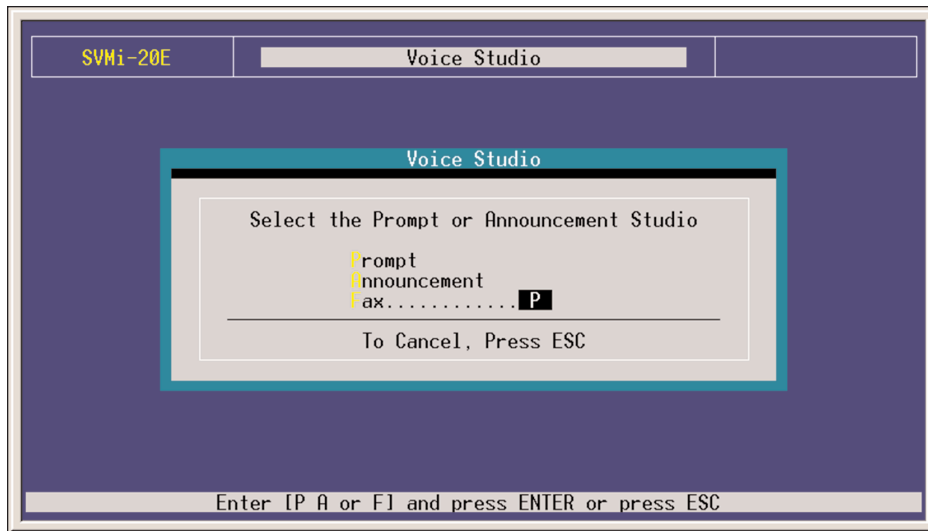

Prompt Recording Studio

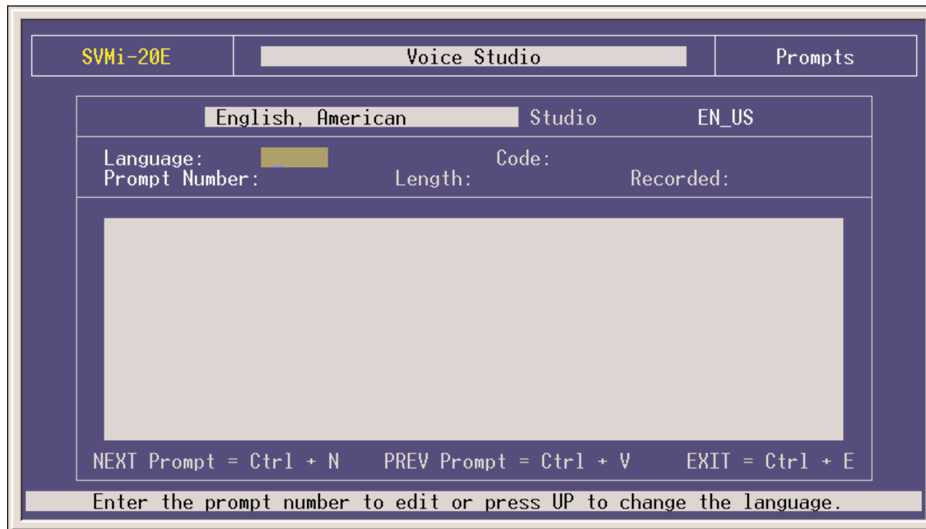

The screenshot shows a software window titled 'SVMi-20E Voice Studio Prompts'. The interface is divided into several sections. At the top, there's a header bar with the title and three tabs: 'SVMi-20E', 'Voice Studio', and 'Prompts'. Below the header, there's a section for 'English, American' with 'Studio' and 'EN_US' labels. Underneath, there are fields for 'Language:', 'Prompt Number:', 'Length:', 'Code:', and 'Recorded:'. A large text area is in the center. At the bottom, there are instructions: 'NEXT Prompt = Ctrl + N', 'PREV Prompt = Ctrl + V', 'EXIT = Ctrl + E', and a prompt 'Enter the prompt number to edit or press UP to change the language.'

LANGUAGE This is a language option. You may select from any installed language and from that point on the Voice studio will interact with that language.

CODE This is the code for the language (actually it represents the sub-directory under PMT in which the Language is installed). It is a memo field only and can not be changed.

PROMPT NUMBER The number of the Prompt to be recorded or reviewed. After entering a valid prompt number you will be presented with instructions to record or re-record. You may re-record any prompt in the system, but if you re-record system prompts (prompts below # 1000) the original prompt will be lost.

LENGTH The length of the recording in seconds. This parameter is automatically filled in by the SVMi-20E when the Prompt is recorded.

RECORDED The date the recording was made or last updated.

TEXT Space is provided for entering the text of the Prompt to be recorded. Use this space to provide information on the intended usage of the recording. The entered text has no effect on the actual recording. However, it is recommended that the recording be the same as the text to make later editing or re-recording easier.

Note: When a prompt has been recorded, sometimes there is some ambient noise at the front or back that needs to be trimmed. Press 4 and select trim mode. You may now clip small amounts of 'noise' from the front or back of the voice prompt. Repeatedly press 1 (or 2) to trim small amounts from the front (or back) until the prompt sounds clean.

Announcement Recording Studio

When selecting to record an announcement a Group dialog box will open so you can select the group number that this announcement belongs to. There can be up to 99 different groups. For most applications you will select group 01 unless you have written your application to use multiple groups.

The screenshot shows a software interface with a dark blue background. At the top, there is a header bar with three sections: 'SVMi-20E' in yellow, 'Voice Studio' in a white box, and an empty white box. In the center, a teal-bordered dialog box titled 'Group Number' is displayed. Inside this dialog, a white box contains the text 'Please Enter the Group Number:' followed by a black input field containing the number '01'. At the bottom of the main interface, a white bar contains the text 'Enter the subscriber group number (01-99)'.

The screenshot shows a software interface with a dark blue background. At the top, there is a header bar with three sections: 'SVMi-20E' in yellow, 'Voice Studio' in a white box, and 'Group - 01' in a white box. Below the header, a white-bordered box titled 'ANNOUNCEMENT Recording Studio' contains a table with three columns: 'Announc', 'Length:', and 'Recorded:'. The 'Announc' column has a yellow input field. Below the table is a large, empty white rectangular area. At the bottom of the white-bordered box, there are two buttons: 'NEXT Announcement = F12' and 'PREV Announcement = Shift+F12'. Below the entire white-bordered box, a white bar contains the text 'Enter the announcement number to edit or press ESC'.

ANNOUNCEMENT NUMBER The number of the Announcement to be recorded or reviewed. After entering a valid prompt number you will be presented with instructions to record or re-record.

LENGTH The length of the recording in seconds. This parameter is automatically filled in by the SVMi-20E when the Announcement is recorded.

RECORDED The date the recording was made or last updated.

TEXT Space is provided for entering the text of the Announcement to be recorded. Use this space to provide information on the intended usage of the recording. The entered text has no effect on the actual recording. However, it is recommended that the recording be the same as the text to make later editing or re-recording easier.

Fax Recording Studio

When selecting to record a voice announcement for a fax document, a Group dialog box will open so you can select the group number that this Fax Document belongs to. There can be up to 99 different groups. For most applications you will select group 01 unless you have written your application to use multiple groups.

SVMi-20E	Voice Studio	Group - 01
ANNOUNCEMENT Recording Studio		
Announc	Length:	Recorded:
NEXT Announcement = F12		PREV Announcement = Shift+F12
Enter the announcement number to edit or press ESC		

SVMi-20E	Voice Studio	Group - 01
FAX Voice Label Recording Studio		
Fax Number:	Length:	Recorded:
NEXT Fax Document = F12		PREV Fax Document = Shift+F12
Enter the fax document to edit or press ESC		

FAX NUMBER The number of the Fax to be recorded or reviewed. After entering a valid prompt number you will be presented with instructions to record or re-record.

LENGTH The length of the recording in seconds. This parameter is automatically filled in by the SVMi-20E when the Fax is recorded.

RECORDED The date the recording was made or last updated.

TEXT Space is provided for entering the text of the Voice Announcement to be recorded describing the Fax document. Use this space to provide information on the intended usage of the recording. The entered text has no effect on the actual recording or Fax document. However, it is recommended that the recording be the same as the text to make later editing or re-recording easier.

[G] OPERATING UTILITIES

To access Operating Utilities, from the System Main Menu select OPERATING UTILITIES and press ENTER.

This menu screen is used for accessing various display logs and System Administrator facilities. The utilities and parameters contained within the Operating Utilities are as follows:

[A] Display User Log

This log provides information on all user accesses to the system. Information displayed includes Subscriber Logon, Port Used, Service Accessed, Message Center Activities, Greetings Recorded, and all other User Activities. During system maintenance this log will be truncated. Only the most recent 1MB will be kept.

SVMi-20E Operating Utilities Menu

Subscriber Import


Scroll through the list below. If it is correct, press **ENTER** to continue. Otherwise, press **ESC** to cancel the import procedure.

Subscriber	Ext Number	Mbx Number
Cliff Taylor	3725	
Shawn Guenther	3727	
Scott Hoek	3726	
Neville Thomas	3728	
Joel Kao	3729	
Sharon Chang	3731	
Vivian Sommerfel	3730	
Robert Walraven	3732	

Press UP ARROW and DOWN ARROW to scroll through subscribers

[B] Display Error Log

This is a log of all system errors and other information including startup and System Daily Maintenance. The information supplied in this log includes: SVMi-20E breeding mailbox, lost message file recovered, SVMi-20E shutting down and other system information. During system maintenance this log will be truncated. Only the most recent 1MB will be kept.

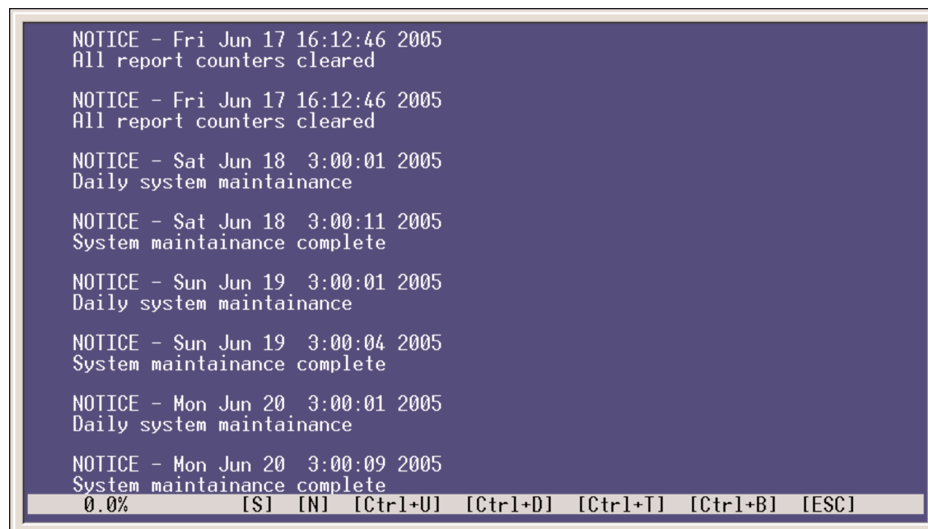

```

NOTICE - Fri Jun 17 16:12:46 2005
All report counters cleared

NOTICE - Fri Jun 17 16:12:46 2005
All report counters cleared

NOTICE - Sat Jun 18  3:00:01 2005
Daily system maintainance

NOTICE - Sat Jun 18  3:00:11 2005
System maintainance complete

NOTICE - Sun Jun 19  3:00:01 2005
Daily system maintainance

NOTICE - Sun Jun 19  3:00:04 2005
System maintainance complete

NOTICE - Mon Jun 20  3:00:01 2005
Daily system maintainance

NOTICE - Mon Jun 20  3:00:09 2005
System maintainance complete
0.0%      [S] [N] [Ctrl+U] [Ctrl+D] [Ctrl+T] [Ctrl+B] [ESC]

```

[C] Activity Log

This screen provides a log of all of SVMi-20E activities. These include: changing to another mode, SVMi-20E hanging up, new call and call data, or searching on caller ID or entry. Everything the SVMi-20E does is logged here. Usually this will only be used under direction of Samsung Technical Support. During system maintenance this log will be truncated. Only the most recent 1MB will be kept.

Note: A useful feature of the Activity Log is the ability to search for a specific event. Press "s" to bring up the Activity Search Dialog Box. Under "Search for:" enter the text to find. Set "Search Backward" to Y to search previous entries. Set "Match case" to N to locate the entry in either upper-case, or lower-case type.

[D] Shutdown System

Shutdown System does exactly what you would expect. It will deactivate the SVMi-20E and shut down the application. The SVMi-20E will not answer the telephone until restarted. This is the preferred and recommended method of shutting down the SVMi-20E, also referred to as a "Proper Shutdown".


Warning: For the system to be shut down the SVMi-20E must lock its ports temporarily. Any idle ports are immediately locked. As ports become free they are also locked. When all ports are locked the system will exit. You must restart the system to bring the ports back online.

[E] Subscriber Import

The Subscriber Import provides an easy way to import large lists of subscribers into the SVMi-20E from any existing text file. Use an existing text file with all employees listed to quickly create an import file and follow the instructions provided by the SVMi-20E in the dialog screens.


- Select Group
- Edit Template Dialog
- Select the .txt file to import
- Select Subscriber Objects
- Review Import List

This will be useful in Multi-Node OfficeServ 7000 Series Networking environments where you are using multiple SVMi-20E and utilizing Network Mailboxes. You can Export the Subscribers from one node to a Export.txt file and then import those subscribers into another SVMi-20E in another node as Network MBXs. This will allow subscribers in one node to transfer messages they receive in their mailbox to a mailbox of a subscriber in another node on a different SVMi-20E system.

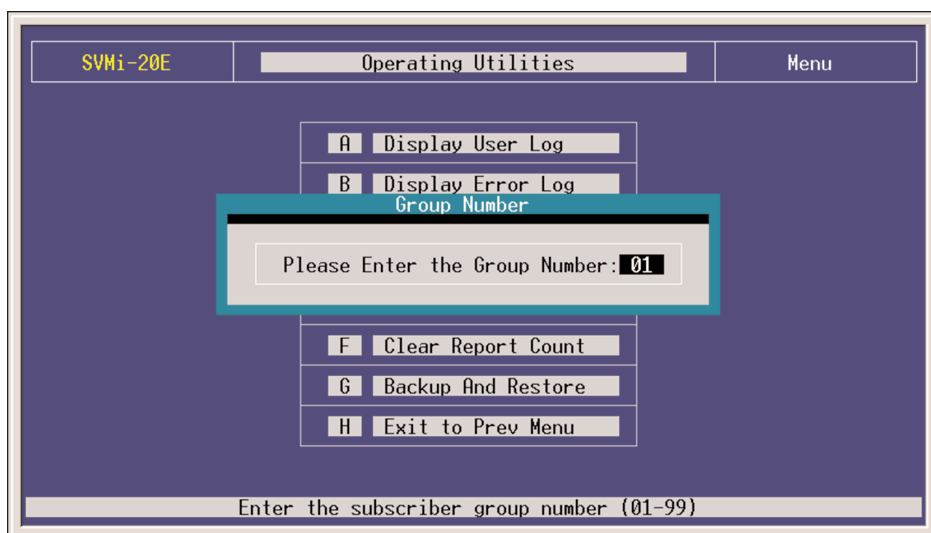

Select Group Dialog

Select the Group Number the subscribers will be listed under. Group Numbers are convenient for organizing large sets of subscribers into specific groups. In special cases, e.g. multiple tenants sharing a switch, or when the SVMi-20E is connected to more than one switch, it is necessary to partition subscribers extensions and mailboxes. In such cases, several subscribers may have the same Extension or Mailbox Number, or the tenants may wish to restrict transfers between the different groups. Because The SVMi-20E does not allow the same Extension or Mailbox Number to be used more than once in a Group, and only allows transfers between members of the same Group, it is recommended that all subscribers use Group 01. Values from 01 to 99 are valid entries.

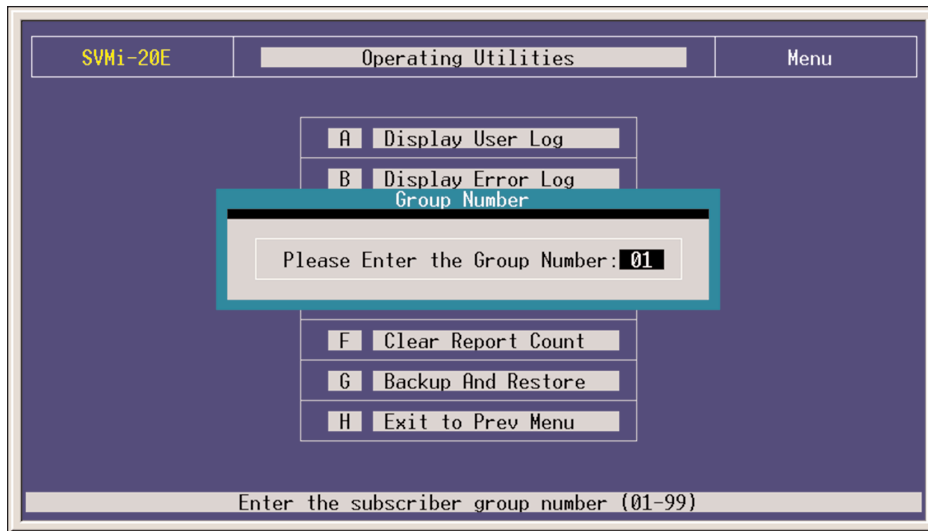

Edit Template Dialog

This dialog provides directions for importing subscribers. Make sure the Template Mailbox and Extension Blocks are set up BEFORE importing the subscribers. The SVMi-20E will set up the imported subscriber extensions and mailboxes using these Blocks. This reduces the amount of work needed later on to set these Blocks up one-by-one for each subscriber.



The file used to import the subscribers can be any name but MUST have a .txt extension <export.txt>.

SVMi-20E Operating Utilities Menu

A Display User Log

B Display Error Log

Group Number

Please Enter the Group Number: 01

F Clear Report Count

G Backup And Restore

H Exit to Prev Menu

Enter the subscriber group number (01-99)


Select Subscriber Objects Dialog

This facility allows easy importation of a large number of subscribers. In the selection field enter either:

- E for Extensions
- M for Mailboxes
- B for Both EXT & MBX
- N for Network MBX

Create a text file, or use any existing text file, to import subscribers. The file can be named user.txt and include separate columns for the user name, extension, and/or mailbox. Only the subscriber list may be in the file. The user.txt file can look like:

Sandy Parks	217	217
Dusty Roads	222	202
Sonny Skies	227	007
Jane Doe		201
John Doe		202

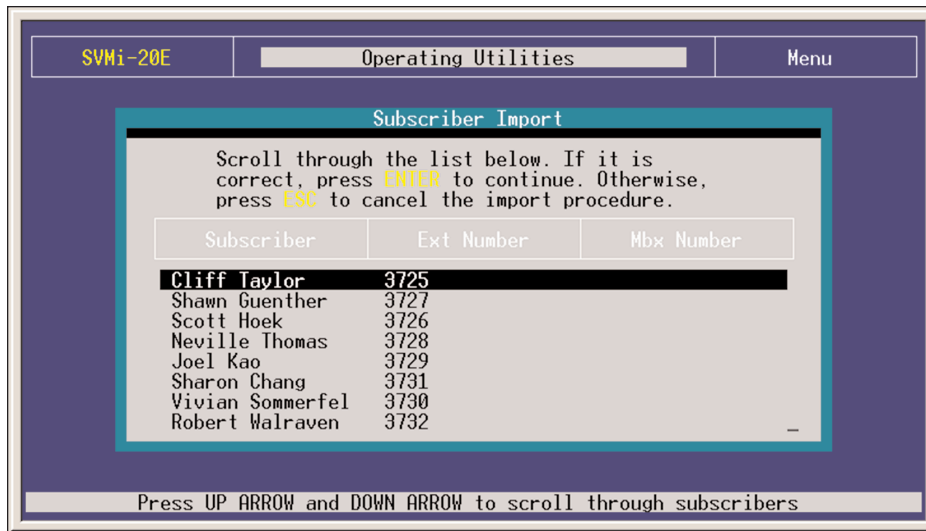

Review Import List Dialog

Scroll through, and review, the subscriber list. The list may not be edited at this point. Accept it as is and press ENTER or reject the list and press the ESC key. All editing that may need to be done on the subscriber list must be done in the text file the list was created in.

[F] Clear Report Count

This clears all report counters. Report counters can be found throughout the SVMi-20E block definitions and on the Status Screen. This will not clear the total run time display in System Wide Parameters.

[G] Backup & Restore and FTP

The Backup and Restore on the SVMi-20E is performed through the LAN connector. You can backup to a PC hooked directly to this connector using a Crossover cable or to a PC on the customer's Local Area Network using a straight through cable.

This utility simply shuts down the SVMi-20E and automatically engages the Built in FTP Server software. The SVM Software must be shut down in order to run the FTP Server software, which means it is not processing any calls while the backup is being performed.

There is a separate Backup and Restore utility program called SVMBackup that must be loaded on the directly attached PC or on the Client PC attached to the Local Area Network. You could also use FTP to simply copy the files you want to backup onto a drive on the network. To use FTP you must have your own FTP Client Software.

When your Backup is completed and you want to put the SVM back on line, simply press the red reset button or use MMC-740 or MMC-806 to reset the SVM card. Any of these methods will terminate the FTP Server and restart the SVM.

[H] Exit to Prev Menu

Returns to the System Main Menu.

[H] PORT ACTIVITY

The Port Activity Monitor is an extremely useful tool for diagnosing problems on an installed SVMi series system. This screen will display all activity in real time as it happens and is also being broken up and written to the Activity, User, and Error Logs simultaneously. This activity contains detailed information for both, Subscriber and Public Caller, call sessions. The viewable Monitors are Monit, CP, and Debug. When a system is restarted only the Monit monitor is on.

This area is a command line driven utility. Pressing [F1] after entering Port Activity will list all the commands we allow the Dealers and End User Administrators to use.

The following commands can be typed in at the => prompt to determine how much and what type of information is displayed:

Port Activity Commands

ACTIVITY: Displays the Activity Log. This is also the same view that can be seen from the Operating Utilities Menu. It is some times more convenient to enter it from Port Activity.
Syntax: **ACTIVITY**

CP: Turns the Call Progress monitor on or off for one or all ports. When watching the port activity screen, the data preceded with a CP represents data reported by the Call Progress monitors. This monitor can be used alone or with either or both the Monit and debug Monitors.
Syntax: **CP** [port|ALL|OFF]

DEBUG: Turns the Debugging monitor on or off for one or all ports. This is useful when experiencing hard to detect problems.

Often you will need to leave this monitor and the CP monitor on and let the system run for a while. You can then follow the reported information in the Activity, User, and Error Logs for trouble shooting purposes. Leaving all the monitors on all the time will cause the time period stored in the logs to be shorter because there is so much more information being reported.

When watching the port activity screen or looking through the log files, the data preceded by a DB represents the data the DEBUG monitors reported. The information reported by the Debug monitor is often cryptic, but is very useful for the software engineer's when their assistance is required in troubleshooting a problem.

This monitor can be used alone or with either or both the Monit and debug Monitors.
Syntax: **DEBUG** [port|ALL|OFF]

DISPLAY: Loads the file specified by name into the File Display Facility. The file must be an ASCII formatted text file in order to be properly viewed. When specifying the {filespec} you must include the full DOS path along with the full file name if it is not in the DTA directory [drive:\path\filename.ext]. Using the FILES command and highlighting a file and then pressing [V] often is easier if you have a few files you want to see and bounce between. Neither of these methods of viewing the contents of a file will allow you to edit it.
Syntax: **DISP** {filespec}

ERROR:	Displays the Error Log. <i>Syntax:</i> ERROR
EXITALL	Forces the SVMi to perform an immediate shutdown, and returns the cursor to the DOS command prompt. This will not wait for ports to clear and will terminate any existing calls in progress. <i>Syntax:</i> EXITALL
FILES:	Allows copying, renaming, viewing, and deleting files. You can use the Files command similarly to using the DIR command in DOS, [drive:\path\filename.ext]. The asterisk [*] can be used as a wild card within the filename and/or extension. <i>Syntax:</i> FILES {file spec} <i>Example: FILES c:\dta*.log</i> <i>(this will display all files in the DTA directory with an extension of .LOG)</i>
IPC:	Turns on/off monitoring system communication messages for all or specific ports. Must be turned off with "OFF" command-not done by maintenance. It may be used in combination with any of the other monitors. <i>Syntax:</i> IPC [port ALL Off]
LOCK:	Will busy out a port(s), when in goes idle. You can view which ports have been forced into a locked condition <i>Syntax:</i> LOCK [port ALL]
LOGOFF:	Hangs up the RMATS modem port. <i>Syntax:</i> LOGOFF
MAC:	From Port Activity you can type "mac" to have the system's MAC address temporarily displayed on the screen. The MAC Address is also always displayed on Page One of System Wide Parameters. The MAC address is required for ordering a License Key to unlock a number of E-Mail Gateway Subscriber Mailboxes.
MAINTENANCE:	Schedules daily system maintenance to begin at the first available opportunity. <i>Syntax:</i> MAINT
MESSAGE:	Lists the messages in a group by owner. Group defaults to 01 if not specified. <i>Syntax:</i> MESS [group] <ul style="list-style-type: none"> ■ Displays a list of all message files in the form: ■ Recipient Name (from Mailbox Label) ■ Sender Name (blank if public or unknown) ■ Date and Time Sent ■ Type (V - Voice) ■ Message Status (Saved, New) ■ Filename
MONITOR:	Turns the Activity monitor on or off for one or all ports. <i>Syntax:</i> MONIT [port ALL OFF]

NET:	<p>The net command is used in two ways:</p> <ol style="list-style-type: none">1. To show the current status of the SVMi network connection at the very moment you typed NET and hit the [enter] key.2. Typing 'net ON' or 'net OFF' will toggle the state of network traffic reporting as it pertains to the SVMi.
RX:	<p>Used to prepare the SVMi to be ready to receive a file from the terminal device connected to the SIO connector. When specifying the {filespec} you must include the full DOS path along with the full file name if it is not in the DTA directory [drive:\path\filename.ext]. <i>Syntax: RX {filespec}</i></p>
SERIAL:	<p>List block serial numbers by block type. <i>Syntax: SERIAL [block type]</i></p>
SHELL:	<p>Halts/Suspends system operations and executes a DOS command or brings you to a DOS prompt.</p> <p>By using the SHELL command by itself you can temporarily exit to a DOS shell. To return to the Port Activity Screen after running the Shell in this fashion you must type EXIT from the DOS prompt. <i>Syntax: SHELL [DOS command]</i> DO NOT run SHELL if attached via the LAN connector</p>
STATUS:	<p>Displays port status, available memory and hard drive space. <i>Syntax: STAT</i></p>
STOP:	<p>Stops a port and puts it in the idle state. <i>Syntax: STOP [port]</i></p>
TX:	<p>Used when trying to transmit a file from the SVMi to the terminal device connected to the SIO connector. XMODEM is the preferred transmit protocol. When specifying the {filespec} you must include the full DOS path along with the full file name if it is not in the DTA directory [drive:\path\filename.ext]. <i>Syntax: TX {filespec}</i></p>
UNLOCK:	<p>Returns a locked port to the idle state. <i>Syntax: UNLOCK [port]</i></p>
USER:	<p>Displays the User Activity Log. <i>Syntax: USER</i></p>

Port Activity Facility HELP There are two pages of help screens immediately available to the System Administrator. To access the help screens, press F1 to bring up the first page of help and page up or down to move between the two pages. The help screens provide information on commands to control and monitor the SVMi-20E' ports. To execute a command, type the command and arguments at the command line prompt => and then press ENTER. To exit the facility and return to the System Main Menu, press [Ctrl]+[E].

You may be asked to access this screen by Samsung Technical Support.

Port Activity Facility Help		Page 1 of 2
<p>This facility provides commands to control and monitor system ports. To execute a command, type the command and arguments at the prompt and press ENTER. To exit the facility, press Ctrl + E or type EXIT.</p>		
<p>Command Arguments → Command Action & Description</p>		
<p>ACTIVITY → Displays the Activity Log. CP [port ALL OFF] → Turns the Call Progress monitor on or off for one or all ports. DEBUG [port ALL OFF] → Turns the Debugging monitor on or off for one or all ports. DISPLAY [filename] → Loads the file specified by name into the File Display Facility. ERROR → Displays the Error Log. FILES [file spec] → Allows copying, renaming and deleting files. IPC [ON OFF] → Turns the DCS IPC monitor on or off. LOCK [port] → Busies out a port when in goes idle. LOGOFF → Hangs up the RMATS modem port.</p>		
<p>Press Ctrl+D for next screen or ESC to exit</p>		

Port Activity Facility HELP		Page 2 of 2
<p>Command Arguments → Command Action & Description</p>		
<p>MAINTENANCE → Schedules daily system maintenance to begin at the first available opportunity. MESSAGE [group] → Lists the messages in a group by owner. Group defaults to 01 if not specified. MONITOR [port ALL OFF] → Turns the Activity monitor on or off for one or all ports. NET [ON OFF] → Turns the NETwork debug monitor on or off RX [filename] → Receive a file using the XModem protocol. SERIAL [block type] → List block serial numbers by block type. SHELL [DOS command] → Halts system and executes a DOS command. STATUS → Displays system memory and port status. STOP [port] → Stops one or more ports and puts them into the idle state. UNLOCK [port] → Returns a locked port to the idle state. USER → Displays the User Activity Log. XX [filename] → Transmit a file using the XModem protocol.</p>		
<p>Press Ctrl+U for previous screen or ESC to exit</p>		

[I] OVERRIDE MODE

The Override Mode bypasses control of the Schedule Table. This allows the System Administrator to immediately put a single port or group of ports in a specific mode. This override will stay active, on the specified ports, until the System Administrator reasserts the automatic schedule. The Override Mode can be activated remotely by the System Administrator. See Manual Mode Selection.

The Override Mode has one page which contains all parameters. The parameters are grouped by category as follows:

PORTS This parameter specifies which port(s) are to be set active to a specific Mode Block. Entering "All" in this field would assert a Mode Block to all ports.

USE MODE This field is used to pick which Mode Block is to be asserted. To select a Mode, press ENTER to bring up the Target Generator pick list. Select the appropriate Mode and press ENTER. Press F10 to review or edit the selected Mode.

PORT : MODE COLUMN This field shows the controlling Mode Block for each of the active ports on the system, as well as those ports that are controlled by the schedule. It will reflect the changes made in the 'Ports' and 'Use Mode' entries.

[J] VIEW SYSTEM REPORTS

Management Information

The SVMi-20E architecture provides a large number of counters to track specific events occurring in an application and on a system wide basis, this allows an administrator to quickly view activity and parameter value settings.

The SVMi-20E offers activity data and parameter value settings that provide management information on volume of calls, call connect time, messaging status, and resource utilization.

Note that there are many applications that may be created that introduce complexity to the reporting process. For instance, blind transfers will cause a call record when the SVMi-20E answers and then another record when the station forwards or recalls (2 records for 1 call). Also the calculations are made by each module of software and may seem to be inconsistent if a comparison to another statistic is assumed. For this reason, we suggest you use these reports as a guideline only or to observe trends over time. We can explain how each number is generated, but because each application is different we may not be able to explain apparent inconsistencies.


The screenshot shows a terminal window titled "SVMi-20E" with a menu titled "View System Reports". The menu has a "Menu" button in the top right corner. The main content area displays a list of options, each preceded by a letter in a box: A By Application (highlighted in green), B To Subscribers, C Messaging Activity, D By Call Code, E By Hour, F By Port Number, G By Day of Week, and H Exit to Prev Menu. At the bottom of the screen, a status bar reads "Display call activity by application type_".

Option	Description
A	By Application
B	To Subscribers
C	Messaging Activity
D	By Call Code
E	By Hour
F	By Port Number
G	By Day of Week
H	Exit to Prev Menu

Display call activity by application type_

By Application (Call Distribution)

Displays call activity by application type.

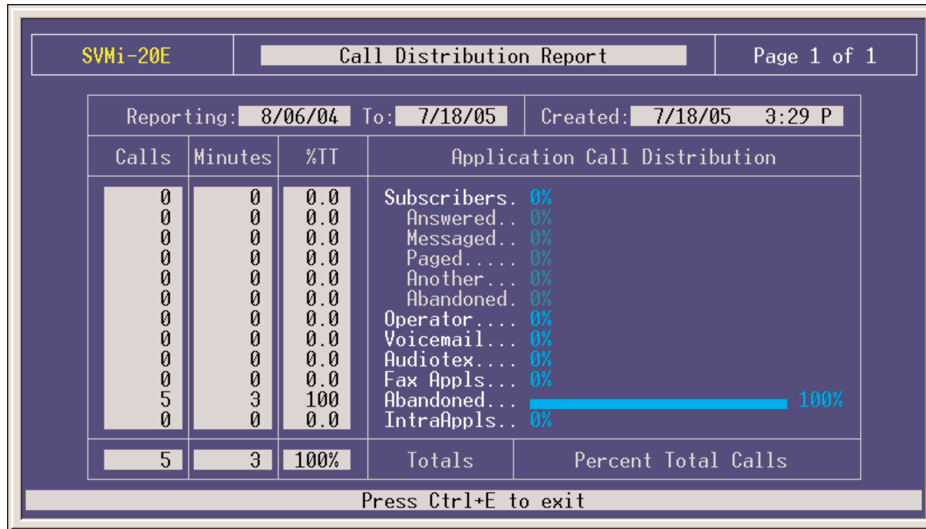

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

CALLS The total number of calls serviced by an application type. One caller accessing more than one application, such as Voicemail and Fax Applications (two applications), counts as two callers.

MINUTES Total minutes callers were connected to an application type.

% TT The total percentages of callers connected to an application type.

APPLICATION CALL DISTRIBUTION A bar chart of the different applications and the percentages of calls each application serviced. IntraAppls is Intra-application which represents the callers who accessed more than one type of application.

To Subscribers (Call Distribution)

Displays call activity at subscriber's extensions.

SVMi-20E		Call Distribution Report		Page 1 of 1	
Reporting: 8/06/04		To: 7/18/05		Created: 7/18/05 3:31 P	
Subs Calls		Calls to Subscribers - Extensions			
0		Completed..... 0%			
0		ReDirected..... 0%			
0		Rejected..... 0%			
0		Sub Total..... 0%			
0		Ring NO-Ansr... 0%			
0		Busy Ext..... 0%			
0		Blocked..... 0%			
0		Abandoned..... 0%			
0		Selected Mbx... 0%			
0		Other Options.. 0%			
0		HELD for Busy.. 0%			
0		Tot SubsCalls		Caller Hold Time: 0	
Press Ctrl+E to exit					

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

SUBS CALLS The total number of calls to the subscriber's extensions, listed by how the calls were handled (completed, redirected, rejected, etc.).

CALLS TO SUBSCRIBERS - EXTENSIONS A listing of how all calls to the subscribers were handled and their percentages. For example, 9% of all calls to subscribers were cases where the subscriber's extension was busy.

TOT SUBSCALLS The total number of calls to the subscriber's extensions.

CALLER HOLD TIME The total number of minutes callers were on hold.

Message Activity (Call Distribution)

Displays call activity for public callers and subscribers in Mailboxes.

SVMi-20E		Call Distribution Report		Page 1 of 1	
Reporting: 8/06/04		To: 7/18/05		Created: 7/18/05 3:31 P	
Activity	Public		Subscriber		Totals
Mailbox Access Count	0	0.0	0	0.0	0
Messages Received From	0	0.0	0	0.0	0
Messages Sent From Mbx			0		0
No Messages Sent	0				0
Current Message Count	0	0.0	0	0.0	0
New Messages	0	0.0	0	0.0	0
Saved Messages	0	0.0	0	0.0	0
Avg Messages/Mailbox	0.0	0.0	0.0	0.0	0.0
Total Connect Minutes	0	0.0	0	0.0	0
Disk Space Available: 1965. MegaBytes					
Press Ctrl+E to exit					

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

ACTIVITY The Message Activity types. Several different categories are shown.


PUBLIC The first column is the total number of public callers that accessed a particular type of Message Activity. The second column is the percentage of public callers out of the total number of callers, including subscribers, that accessed a particular type of Message Activity.

SUBSCRIBER The first column is the total number of subscriber callers that accessed a particular type of Message Activity. The second column is the percentage of subscriber callers, out of the total number of callers, including public callers, that accessed a particular type of Message Activity.

TOTALS The total number of all callers that accessed a particular type of Message Activity.

By Call Code (Call Distribution)

Displays activity by all types.

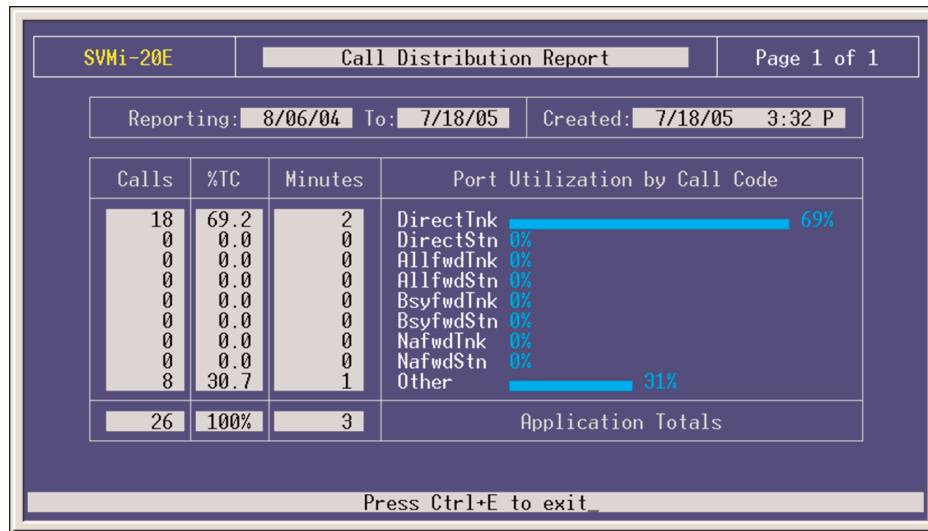

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED: The date and time the report was actually created.

CALLS The total number of calls listed by each Call Code.


%TC The percentage of the total count of all calls of a particular Call Code.

MINUTES The total connect time, in minutes, of all calls of a particular Call Code.

PORT UTILIZATION BY CALL CODE A listing of the Call Code types and their port utilization by percentage.

By Hour (Port Utilization)

Displays call activity by each hour of the day.

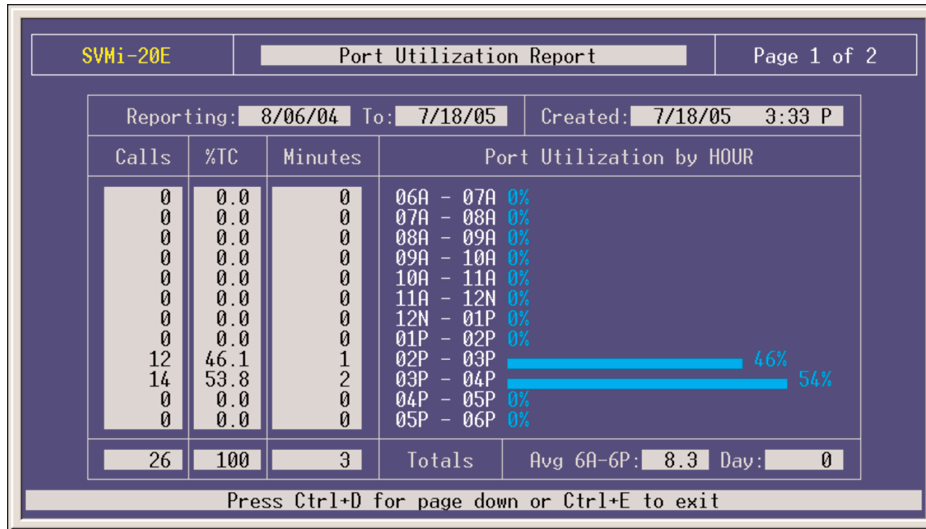

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

CALLS The total number of calls that came in during a specific hour.

%TC The percentage of all calls received during a specific hour.

MINUTES The total connect time, in minutes, of all calls during a specific time period.

PORT UTILIZATION BY HOUR A listing of the time periods and their port utilization by percentage.

By Port Number (Port Utilization)

Displays call activity by port (the SVMi-16 with more than 8 ports will require two screens to show the information for all installed ports. All other products only need one screen. [Ctrl][D] allows you to view page two and [Ctrl][U] allows you to go back to page one.)

SVMi-20E		Port Utilization Report		Page 1 of 2	
Reporting: 8/06/04		To: 7/18/05		Created: 7/18/05 3:33 P	
Calls	%TC	Minutes	Port Utilization		
18	69.2	2	Port 01..	69%	
0	0.0	0	Port 02..	0%	
0	0.0	0	Port 03..	0%	
0	0.0	0	Port 04..	0%	
0	0.0	0	Port 05..	0%	
0	0.0	0	Port 06..	0%	
0	0.0	0	Port 07..	0%	
0	0.0	0	Port 08..	0%	
18	0.0	2	Totals		
Press Ctrl+D for page down or Ctrl+E to exit					

SVMi-20E		Port Utilization Report		Page 2 of 2	
Reporting: 8/06/04		To: 7/18/05		Created: 7/18/05 3:33 P	
Calls	%TC	Minutes	Port Utilization		
0	0.0	0	Port 09.. 0%		
5	19.2	0	Port 10.. 19%		
3	11.5	0	Port 11.. 12%		
0	0.0	0	Port 12.. 0%		
			Port 13..		
			Port 14..		
			Port 15..		
			Port 16..		
8	0.0	1	Totals		
Press Ctrl+U for page up or Ctrl+E to exit					

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

CALLS The total number of calls that came in on a specific port.


%TC The percentage of all calls received on a specific port.

MINUTES The total connect time, in minutes, of all calls on a specific port.

PORT UTILIZATION BY PORT NUMBER A listing of the ports and the percentage of calls handled by each port represented by a bar chart.

By Day of Week (Port Utilization)

Displays call activity by day of week.

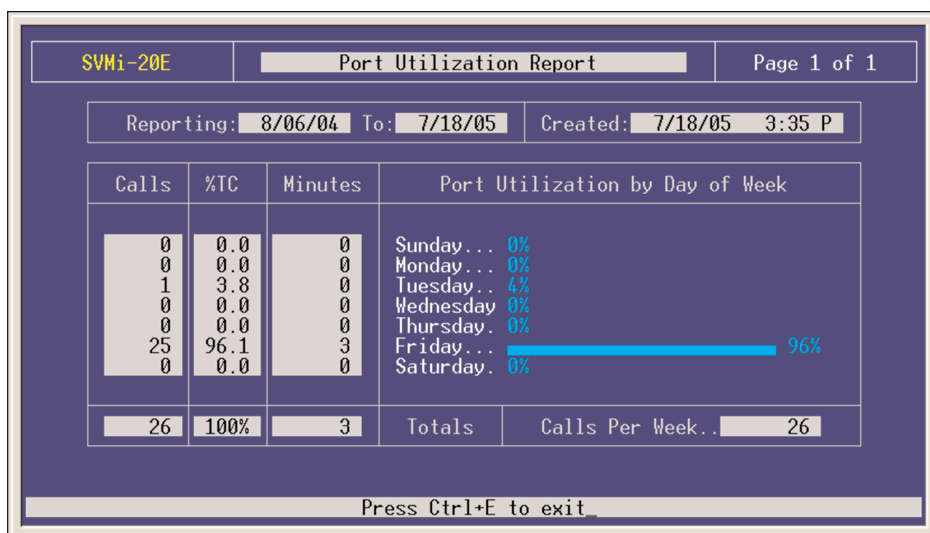

REPORTING Indicates the report period. This is the date beginning when the Report Counters were last cleared and ending at the current date.

CREATED The date and time the report was actually created.

CALLS The total number of calls that came in on a specific day of the week.

%TC The percentage of all calls received on a specific day of the week.

MINUTES The total connect time, in minutes, of all calls on a specific day of the week.

PORT UTILIZATION BY DAY OF WEEK A listing of the days of the week and the percentage of calls handled by each day, represented by the bar chart.

Exit to Previous Menu (Port Utilization)

Returns to Main Menu.

NOTE: On many Blocks on the system there is also an Activity Page that displays the activity and usage of some of the functionality of that Block. Information on a Blocks Activity Page is explained in a separate technical document pertaining to that block type.

[K] SITE INFORMATION

This screen menu allows the System Administrator access to helpful information about the site in which the SVMi-20E is installed. This information becomes very useful long after the system installation has been completed.

These are only memo screens but it is recommended that these screens be filled out for all sites. Having a record of all port connections helps make trouble shooting easier, if it becomes necessary.

[L] STATUS SCREEN

This is the normal operating screen for the SVMi-20E. The Status Screen is a display only facility, and shows information in real time relating to the current status of the SVMi-20E. The following information is displayed.

The SVMi-20E Samsung Voice Mail and Auto Attendant System
 Copyright 1999 - 2004 Samsung Telecommunications America, Inc.

Port	Mode	Active Block	Status
1	Day	Day	Idle
2	Day	Day	Idle
3	Day	Day	Idle
4	Day	Day	Idle
5	Day	Day	Idle
6	Day	Day	Idle
7	Day	Day	Idle
8	Day	Day	Idle

System Activity From — 08/06/04

Today's Date — 07/18/05 3:36PM

Calls To-Date..... 26
Average Calls per Week: 0
Directory Accesses..... 0
Times All Ports Busy... 0

Number of Subscribers... 0
Total Message Count..... 0
Avg Messages/Mailbox.... 0.0
Disk Space Available.... 143:07

Use [Ctrl+D] to view ports. Press [Esc] for the system menu

To switch between viewing ports 1 - 8 and viewing ports 9 - 16 use [Ctrl]+[D] to go to page 2 (ports 9 - 16) or [Ctrl]+[U] to go back to page 1 (ports 1 - 8).

The SVMi-20E Samsung Voice Mail and Auto Attendant System Copyright 1999 - 2004 Samsung Telecommunications America, Inc.			
Port	Mode	Active Block	Status
9	Day	Day	Idle
10	Day	Day	Idle
11	Day	Day	Idle
12	Day	Day	Processing
<div> <div>System Activity From — 08/06/04</div> <div>Today's Date — 07/18/05 3:36PM</div> </div> <div> <div> Calls To-Date.....26 Average Calls per Week: 0 Directory Accesses.....0 Times All Ports Busy...0 </div> <div> Number of Subscribers... 0 Total Message Count..... 0 Avg Messages/Mailbox.... 0.0 Disk Space Available.... 143:07 </div> </div> <div>Use [Ctrl+U] to view ports. Press [Esc] for the system menu</div>			

PORT COLUMN The Port column gives you the number of the voice circuit that the call is taking place on.

MODE COLUMN The Mode Number column lets you know which mode the port is in.

ACTIVE BLOCK COLUMN This column shows you which block is currently servicing the call, as the call gets directed through the call session.

STATUS COLUMN The status column displays the current condition that the port is in. Some examples are: Idle, Processing, Transferring, Messaging, etc.

System Activity

CALLS TO - DATE The total number of calls that the SVMi-20E has processed.

AVERAGE CALLS PER WEEK The average number of calls per week averaged over all weeks.

DIRECTORY ACCESES The total number of callers that have accessed the directory.

TIMES ALL PORTS BUSY The total number of times all ports have been busy.

NUMBER OF SUBSCRIBERS The total number of subscribers on the system. This is actually a mailbox count. Extensions are created for every station port on the phone system.

TOTAL MESSAGE COUNT The total number of messages in the system. This includes new and saved messages.

AVG MESSAGES/MAILBOX The average number of messages in the subscriber's mailboxes.

DISK SPACE AVAILABLE The total disk space available in hours and minutes.

Explanation of Default Configuration

Application Design

Creating an application consists of linking the appropriate Blocks into a set of Call ControlPaths which, for a particular caller, or group of callers, represents a Call Routing Solution. The number of ControlPaths, needed to establish a satisfactory Routing Solution, depends upon how many alternatives or variations the organization wishes to provide, to satisfy the anticipated needs of the caller(s).

The default application is built using Blocks. Each block has a specific purpose and are chained together to build the application. This allows the caller to pass from one to the other as the call is processed.

The default configuration in the SVMi-20E has been designed to simplify installation and reduce the amount of time it takes to learn the application. Many of the programming options have been disabled or fixed at a default value.

When a call is answered, it is processed by a number of blocks behind the scenes. These blocks are hidden for reasons of simplicity. The call is processed in the following way:

NEW CO CALLS New calls are answered by the PORT Block which looks to the SCHEDULE Table to see which MODE Block should take control of the call session. The MODE Block based on the Call type will then pass control to one of the MENU blocks. This may have sounded complicated but is quite simple. By default all of the programming is done for you. Most of the application for the customer actually starts at the MENU Block. Knowledge of how the call is routed through the system will help you create more complex applications only when and/or if necessary.

Depending on the current mode (Day, Night, Holiday, or Weather). A custom Company greeting is played and the caller is directed to any other block in the system based on the DTMF input.

The below Call Routing Solution Chart shows you the communication links and connections between each of the blocks in the system.


FORWARDED CALLS Follow the same initial call flow as stated above. Their Call Type is identified as a Forwarded call and the call is passed to a MENU Block that handles forwarded calls. This MENU Block does not speak to the caller it simply looks at the Forward ID of the Cal and transfers the caller to the appropriate Subscriber's Personal Greeting. Based on the Subscriber's greeting the caller may leave a message, route themselves to another subscriber, return to the main menu, or simply hang up.

Important Basic Concepts

The Programming Concept for the SVMi-20E is a series of Blocks, Pointers, and Objects configured together to create a "Call Routing Solution" for specific Member(s) of the "TeleCommunity"

TeleCommunity Communicate Call Routing Solution

Anybody and/or anything that needs to communicate with the organization
The need to deliver and/or receive information
The process in which the SVMi-20E Series products connects the caller to the Person and/or Device most suitable for communicating with the caller.

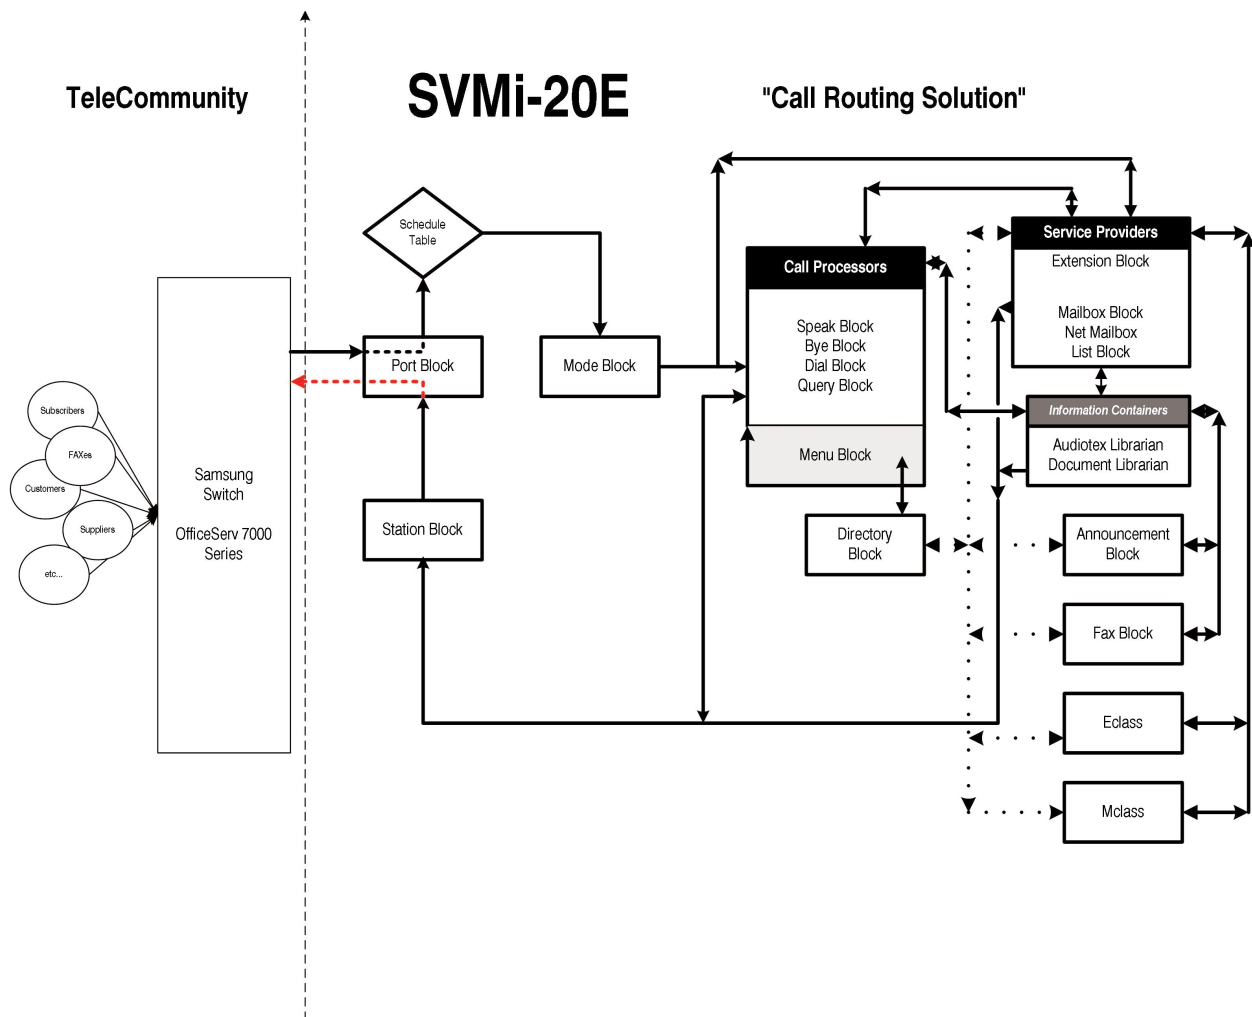

The main purpose or goal of the SVMi-20E concept is Immediate, Personalized, Unobstructed Access; Anytime, Anywhere.

Blocks

Blocks are the components used to build your individual customer application. All call flow is programmed using these blocks. Each block type has a specific function, and can be chained together with other blocks to provide a complete call processing solution.

There are 19 blocks available in the SVMi-20E. They are the following:

<u>Announcement Block</u>	Houses up to 15 minutes of recorded voice information for playback in an audiotex application. It is associated with and managed by an Audiotex Librarian.
<u>Audiotex Librarian Block</u>	Manages the Announcement Blocks, that together forms its Audiotex Library. On-demand, it finds and plays the caller specified Announcement(s). Manages Announcement Block retention, recording length and authorizations, and caller replay options. It also controls the caller's path through its library.
<u>Bye Block</u>	Speaks a prompt, usually "Good-bye", then terminates the call session.
<u>Dial Block</u>	This block is typically used for dial devices such as fax machines and modems, or paging systems. Any device where the power of having the functionality of a subscriber is not necessary.
<u>Directory Block</u>	This is a utility that sets up the necessary parameters used in the subscriber's directory list.
<u>Document Librarian Block</u>	Manages the Fax Blocks, that together forms its FAX or Document Library. On-demand, it finds and faxes back to the caller specified Fax(s). Manages Fax Block retention, recording length and authorizations, and caller replay options. It also controls the caller's path through its library.
<u>EClass Block</u>	This is a class of service block for extensions, and contains additional permissions that apply to all extensions in this class.
<u>Extension Block</u>	Represents the subscriber to a caller. Houses subscriber's settings, personal greetings, and call coverage controls such as call blocking and screening. Contains Caller Option Processor and Designated Location facility for routing callers to subscriber's current telephone, regardless of physical location. Multiple subscribers, each with their own Extension Object, can effectively share a single telephone.
<u>Fax Block</u>	Associated with Fax-On-Demand applications and is used in conjunction with the Document Librarian.
<u>List Block</u>	Delivers recorded voice message to a list of mailboxes. May contain other lists as members.
<u>Mailbox Block</u>	Receives, records, sends, and stores multimedia messages. Contains default personal greeting, name and password for the subscriber. This block contains all the parameters for the mailbox including pager and cell phone notification. One usually exists for each phone on the system.
<u>MClass Block</u>	This is a class of service block for Mailboxes, and contains additional permissions that apply to all Mailboxes in this class.

Menu Block

Speaks prompts to caller and routes on Input from caller entry. The Auto Attendant Main Menu is an example of a menu block.

Mode Block

Answers incoming calls for assigned port(s) by mode, as assigned in the Schedule Table. Collects and stores CallData in appropriate call session Memory Registers. Can speak salutation prompts.

Net Mailbox Block

Receives, records, and sends, multimedia messages. Contains default personal greeting, name and password for the subscriber. This block contains all the parameters for the subscriber's mailbox that would reside in another system. Follows the AMIS standard.

Port Block

Contains all parameters to connect and communicate with the device the SVMi-20E is directly attached to. For most applications changes to this block are not required. It has been made visible because it contains parameters that define what disconnect signal, besides the switch's IPC disconnect Message, we will hang-up on. This is useful when the CO does not provide a consistent disconnect.

Query Block

Speaks a question/statement and expects to record a voice and or DTMF response. Delivers recorded response to one or more mailboxes for transcription.

Speak Block

The purpose of a Speak Block is to speak a prompt or system information to the caller. A Speak Block can contain two prompts in addition to the ability of speaking system information or register contents. After speaking to the caller, control is passed to another Block based on the target of the NEXT pointer .

Station Block

The station block is responsible for dialing. When the SVMi-20E dials or transfers any calls it uses a station block. All devices accessible via Touch-Tone dialing in the SVMi-20E use at least one of these. Each contains the call progress information to monitor and process calls to the associated device(s).

Extension and Mailbox Objects

On the SVMi-20E Subscribers are defined by both extension blocks and mailbox blocks.

The extension block is responsible for playing the appropriate personal greeting, and performing all transfers. It may initiate any hold conditions, park and page and other caller options. Through the access manager you can control call screening, forwarding and blocking, find me and follow me. It is the main component that callers will experience when they dial an extension number and it provides the subscriber with a collection of management tools and personal services including workload manager, availability schedule, stored phone numbers and direct calling.

The mailbox block, is far more simple. It is used primarily for two things.

Recording messages and notification (Alert and Pager).
Each subscriber may have one or both blocks.

Call Directors

Call Directors are powerful tools used to connect the various blocks together. All blocks that pass control of the call to another block use Call Directors. Call Directors pass control of the call to the next block. Which block they pass control to is dependent on certain conditions called events, that have occurred within the current block.

Events may include no entry, invalid entry, no message left, operator requested and user exit. There are many possible events and they will vary depending on the type of block being programmed.

In a Menu Block, the Call Director is called the 'Menu Input Processor' and also acts on data entered by the caller. In an Extension Block, the Call Director is called the 'Caller Options Processor' and also acts on data entered by the caller.

In a Mode Block, the Call Director is called the 'Call Code Processor' and also acts on call type data received from the phone system.

The Bye Block and the Station Block do not have Call Directors, as they are considered the end of a Call Control Path.

Event Pointers

The Call Director uses EVENT POINTERS to pass control of the call to the next block. All Event Pointers consist of an INPUT value, an ACTION, a Block TYPE, and a TARGET.

The INPUT value is the collection of digits, whether received from the caller via DTMF, or telephone system or network integration information, collected in the block.

The ACTION is that which takes place when input from the caller equals the INPUT value.

TYPE, is the type of Block to pass control to, there are five types of ACTIONS: GOTO, TRANSLATE, PASSWORD then GOTO, SEARCH ON, and FILE.

The TARGET is the Name of the Block to pass control to next.

Modes

At any time of the day the SVMi-20E system is in a specific operating mode. This may be as simple as Day Mode (business hours) or Night Mode (business closed) or it can be very complex (Special Mode for Port 2 Only, on July 19th between 7 and 8 p.m.). New modes may be added as needed. The times that operating modes are effective are defined in the Schedule Table. The behavior of the SVMi-20E when it answers a new call during each specific operating mode is defined in the Mode Block.

The SVMi-20E can be made to change modes either manually, by using Special Administrative commands, or automatically as specified in the Schedule Table.

Mode Specific Event Pointers

When programming any block that defines event targets (exit points from the block) the SVMi-20E will first ask you to select a mode. This allows the exit destinations to be different for each mode.

For example, the next pointer might access an announcement informing callers of special daytime sales events during the 'Day' Mode, but after 5:00 p.m., it would pass control to a different announcement about evening shopping hours, during 'Night' Mode.

Pointers set in the 'Default' mode are always in effect unless the same pointer is set in another Operating Mode. The SVMi-20E will display 'Default' mode pointers in a block while viewing pointers in another mode. The 'Default' mode pointers will be grayed out to denote that they are not in the current mode.

Each Operating Mode is given an unique number by the system. Valid numbers are 01-99, and are assigned in sequence as new modes are created. Pressing ENTER at this field opens a Pointer Mode Target Generator, from which an existing mode name may be selected, or a new name may be entered. Entering a new name creates a new Mode with its corresponding Number.

The mode number and name are associated with the block's pointers, not the block itself. This allows one block to route calls to different destinations in different modes, using different Targets for the pointers' various mode references.

Template Blocks

To simplify creating multiple blocks of a given type, the SVMi-20E provides a template for each type of block. Templates have default values preset for many of their parameters. You may change these defaults and save the modified Template, or by using the 'Save As...' option, create a new block of that type, while preserving the original template. Each time a block is created, it will be initialized with the parameter values which are set in the template. This is particularly useful when building mailbox and extension blocks for subscribers, where many of the parameter settings will be uniform from subscriber to subscriber.

Appendix

Special Characters Used When Writing Dialing Instructions

These characters perform special functions when embedded in any dialing string:

& - This is a flash-hook which is critical for signaling on analog systems.

, - The comma is a one second pause.

**** - The backslash is a four second pause.

T - "T" tells the port to switch to tone (DTMF) dialing. This is the default.

W - Wait for answer. On encountering this character, the SVMi-20E will monitor the line for an answer from the called station before dialing any additional characters. If no answer is detected within 6 ring back cycles or 3 busy cycles, the call will be recalled.

; - The semicolon is wait for dial tone. The SVMi-20E will wait up to twelve seconds for dial tone before dialing any additional characters. If no dial tone is detected the call will fail. This is useful in environments that may have a shortage of resources such as a limited number of trunk lines or DTMF receivers.

~di - This is an instruction to dial in band. It is used only in the pager suffix string, and is present to prevent conflicts with in band and out of band signaling.

H - Operate the hookswitch. If on hook go off, if off hook go on.

To tell the SVMi-20E to dial the value of a register, you would put a dollar sign (\$) in front of the Register variable. i.e.: \$C means dial the value stored in the Caller ID Register, \$F means dial the value stored in the Forward Id Register.

[Please see the table on next page.](#)

<i>The registers are listed below with their Variable.</i>	Below are how they are entered
K = Key Value	\$K
X = E X tension Number Value	\$X
C = C aller ID	\$C
F = F orward ID	\$F
T = T runk ID	\$T
B = Call B ack Value	\$B
E = SVM Port E xtension Number	\$E
N = Number of N ew Nessages in a Mailbox	\$N
S = Number of S aved Messages in a Mailbox	\$S
A = LD A ccount Code	\$A
1 = Value stored in Registered 1	\$1
2 = Value stored in Register 2	\$2
3 = Value stored in Register 3	\$3
4 = Value stored in Register 4	\$4