

# What do the different status indicator lights mean on the AP?

Posted by Terrell Boyer on 09 April 2015 10:02 AM

Q: What do the status indicator lights mean on the AP?

A: Answer

<< System Start Status >>

White On: Initial LED status

Blue On: Device reset and test in progress

Red On: Booting failure (Device reset failure)

<< Provisioning status >>

Repeated Red, Green, and Off: Connecting APC (network link normal status)

Blinking Green: Connecting CAPWAP link (APC server normal connection status)

<< Normal Operation Status >>

Green On: When there is no connected wireless user.

Blue On: When there is a connected wireless user.

<< Upgrade >>

Blinking blue: Upgrading software

<< Fault status >>

Blinking red: Abnormal network link (checking link status after disconnection or re-connection)

Blinking orange: IP address conflict

Blinking violet: Dynamic IP Address allocation failure (DHCP) [Possible cause could be that AP can not communicate with DHCP server]

Blinking bluish green: Fixed IP check failure

Repeated Red, Blue, and Off: Wireless interface fault status [Possible cause - DHCP Scope not configured properly.]