

Bulletin No.: 180\_OS7100\_Wall\_Mount July 22, 2008

# OfficeServ<sup>™</sup> 7100 New Wall Mount Bracket Kit

Samsung Telecommunications is pleased to announce the release of a new style of OfficeServ 7100 wall mount bracket. This new bracket is more flexible and will permit customers to install the OfficeServ 7100 KSU securely to the wall in any direction.

Effective immediately (July 22, 2008), all OfficeServ 7100 cabinets shipped will include this new and improved wall mount kit.

For your convenience installation instructions are included in this bulletin. They will be added to the OfficeServ 7100 Installation Manual. The entire OfficeServ 7100 Technical Manual will be posted on GSBN (<a href="www.samsunggsbn.com">www.samsunggsbn.com</a>) in 30 days for downloading.



If you have any questions regarding this notice, please contact your Regional Sales Manager, your Customer Service Representative at the number provided below, or via email at BCS.Sales@samsung.com.

## 1. Installing on a Wall Using the Two Piece Bracket Kit

This section describes how to install the OfficeServ 7100 cabinet on a wall. The OfficeServ 7100 wall mount bracket is required (included with the cabinet).

### **Required Tools**

Mid-sized Phillips screw driver

Electric drill

Hammer

Wall-mount bracket

**q** Four plastic anchors

**W** Four cross-type screws (shorter)

**e** Four locking screws (longer)



Figure 1. Required Tools for Wall Mounting

## 2. Wall Installation

**CAUTION:** Only mount OfficeServ 7100 onto a wall capable of supporting the 7100 cabinet, associated blocks, cables and peripheral equipment.

1) Turn the 7100 cabinet on its bottom side. Using the four short screws, install the two wall mount brackets to the bottom of the cabinet. The wall mount brackets must be correctly installed onto the cabinet with the star shaped holes angled out away from the cabinet as shown below.

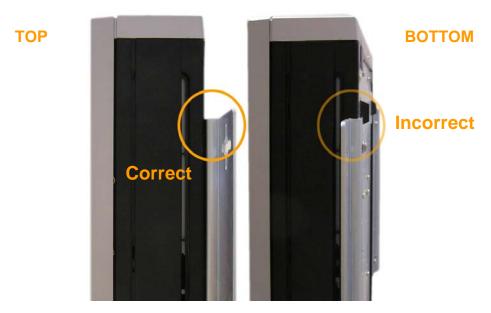


Figure 2.1 OfficeServ 7100 Cabinet Side View—Bracket Angle Out



Figure 2.2 OfficeServ 7100 Cabinet Bottom View—With Brackets

Samsung Telecommunications America Business Communication Systems 1301 East Lookout Drive Richardson, TX 75082

2) Hold the 7100 cabinet against the wall in the desired direction. There are four (plus + shaped) holes on the top and bottom of the bracket (see positions marked A in the figure below). Mark the top two holes on the desired wall then mark the two holes on the bottom brackets.



Figure 2.3 Mounting the 7100 Cabinet on the Wall

3) Using a 3/16" drill bit, make holes on the marked positions of the top and bottom brackets.

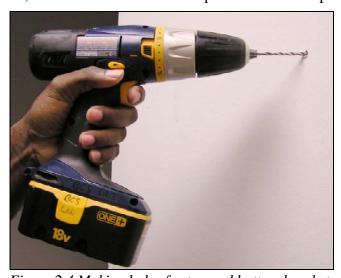


Figure 2.4 Making holes for top and bottom brackets

Samsung Telecommunications America Business Communication Systems 1301 East Lookout Drive Richardson, TX 75082

4) With a hammer, drive the plastic anchors into the drilled holes.



Figure 2.5 Hammering plastic anchors

5) Align the screw holes of the wall mount bracket to the position that the plastic anchors are driven. Insert the remaining (longer) screws to each hole and tighten the screws with a Phillips screw driver.



Figure 2.6 Side View Wall Mounted 7100 Cabinet